2017 **INFINITI Q50 HYBRID** QUICK REFERENCE GUIDE





To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2017/q50 or snap this barcode with an appropriate barcode reader.

Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

VEHICLE OWNER'S MANUAL

• INFINITI CLIENT SUPPORT 1-800-662-6200

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

• INFINITI ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)

As part of the Infiniti Total Ownership Experience[®], Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

INFINITI ELITE® EXTENDED PROTECTION PROGRAM 1-800-662-6200 Infiniti Elite® Assurance Products provide you with quality, long-term protection and enhanced peace of mind.

• INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437 For client support with your Infiniti Financial Services loan or lease.

• INFINITI FINANCIAL SERVICES www.infinitifinance.com

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

- OWNER PORTAL 1-855-444-7244 www.owners.InfinitiUSA.com/iowners Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.
- INFINITI INTOUCH™ 1-855-444-7244 usa.infinitiintouch.com This suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.

SiriusXM RADIO 1-877-447-0011 For support with your SiriusXM subscription.

• INFINITI USA.COM www.InfinitiUSA.com/bluetooth

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

• INFINITI ELECTRONIC QUICK REFERENCE GUIDE

(use the Quick Response (QR) code or URL on this page or on the back cover)

Table of Contents

Cockpit Overview	1
Instrument Panel	3
Meters and Gauges	5
Locking and Unlocking your Vehicle via the Door Handle	
Illumination Controls	7
Wiper and Washer Switch	8
Seat Adjustments	9
Clock Set/Adjustment	
Audio Control Menu1	

Heater and Air Conditioner (automatic)	
Connecting your Cellular Phone or Device via Bluetooth®	11
Voice Recognition	11
Bluetooth® Streaming Audio	
Trip Computer	12
Cruise Control	
Navigation System (if so equipped)	13
Infiniti InTouch [™] Services (if so equipped)	14

Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.




For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



Cockpit Overview




Cockpit Overview

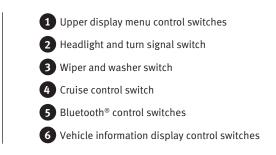



Instrument Panel

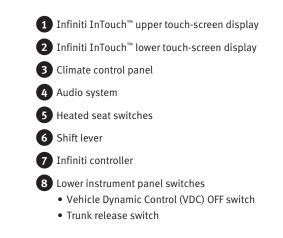

Meters and Gauges

5



Meters and Gauges



Locking and Unlocking your Vehicle via the Door Handle





 


To use the door handles to lock and unlock your vehicle, make sure the Intelligent Key is with you (that is, in your pocket or purse).

- Touch the inside of the door handle 1 to unlock the corresponding front door.
- Pushing the request switch ② while touching the inside of the door handle will unlock the rest of the doors.
- To lock the vehicle, push either door handle request switch (3) once.

AUDIO

To change the settings for the door locking and unlocking system, press the **MENU** button ④, then touch the "Settings" key on the lower display followed by the "Vehicle" key.



• To disable unlocking by touching the inside of the door handle feature, select "Touch Sensitive Door Sensor".

Illumination Controls



INSTRUMENT BRIGHTNESS CONTROLS

• Press the + or – buttons ① to change the brightness of the vehicle information display and instrument panel.

CENTER DISPLAYS BRIGHTNESS CONTROL

To adjust the brightness of the center displays:

- For models with Around View[®] Monitor, press and hold the CAMERA */> button 2. Then, use the Infiniti controller 3 to change the brightness.
- For models without Around View[®] Monitor, press the ☆/ D button, and use the Infiniti controller (3) to change the brightness.



Wiper and Washer Switch



Move the lever 1 up or down to one of the following positions to operate the windshield wipers:

- MIST One sweep operation
- OFF Wipers are OFF
- AUTO Speed-sensing and rain-sensing automatic wipe
- LO Continuous wipe, slow
- HI Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring (2).

Pull the lever 1 toward you operate the windshield washer.



To turn the rain sensor function on or off:

- 1. Press the **MENU** button below the lower display.
- 2. Touch the "Settings" key and then the "Vehicle" key (3) on the display.
- 3. Touch the "Rain Sensor" key 4 to toggle the feature ON and OFF.

When the rain-sensing feature is disabled, the **AUTO** position on the wiper stalk will work in conventional intermittent mode.

PULLING UP THE WIPER ARM

The wiper arm should be in the UP position when replacing the wiper.

- With the shift lever in the **P (PARK)** position, place the ignition switch in the OFF position.
- Within 1 minute, push the wiper switch 1 to the MIST position twice. The wiper operation stops in mid-operation and the wiper arm can be pulled up.



• To return the wiper arm, place the wiper arm in the DOWN position and operate the wiper switch once.

Seat Adjustments



1 Seat cushion forward, backward, up and down adjustments

- 2 Seatback recline adjustment
- 3 Lumbar support adjustment
- 4 Thigh support adjustment

SEAT BACK/LIFT STEERING WHEEL ON EXIT



9

The driver's seat and steering column will automatically move when the shift lever is in the **P (PARK)** position to allow the driver to get in and out of the driver's seat more easily. "Lift Steering Wheel on Exit" and "Slide Driver Seat Back on Exit" can be turned on or off in the "Settings" menu under "Vehicle Settings" on the lower display.

Clock Set/Adjustment



To adjust the time and the appearance of the clock on the display:

- Press the **MENU** button (1) below the lower display. Then, touch the "Settings" key on the lower display.
- Locate and touch the "Clock" key to adjust "On-Screen Clock", "Daylight Savings Time", "Clock Format (24h)", and "Time Zone".

Audio Control Menu



- To adjust the audio settings:
- Then, select the setting you would like to adjust on the screen 2.

	Setting 2
	Day/Night
Bass	
Treble	
Balance	L
Fade	R P

Heater and Air Conditioner (automatic)



The climate controls can be adjusted using the buttons on either side of the lower display or through the "CLIMATE" screen (1) on the lower display.

• To access the "CLIMATE" screen (1), press the **CLIMATE** button (2) below the lower display.

HEATED STEERING WHEEL

To turn the heated steering wheel on or off, touch the "Steering Heater" key (3) on the lower display.

Connecting your Cellular Phone or Device via Bluetooth^{®,1,2}



Using Bluetooth[®] technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone³.

- 1. Press the **MENU** button below the lower display.
- 2. Touch the "Settings" key on the lower display.
- 3. Touch "Phone/Mail".
- 4. Touch "Connect Device".
- 5. Touch "Add New (X/5 Free)".
- 6. Follow the instructions on the "Connect Device" screen. When a PIN appears on the screen, operate the Bluetooth[®] device to enter/confirm the PIN.

For any Bluetooth[®] connectivity issues, reboot your cellular phone or device.

¹ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc.

- ² Some jurisdictions prohibit the use of cellular telephones while driving. Compatible smartphone required. Text rates and/or data usage may apply.
- ³ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Voice Recognition

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- Press the [√]_√ button (1) on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the w≤ button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the $\sqrt[6]{2}$ button (1) on the steering wheel.



Bluetooth® Streaming Audio

If you have a compatible Bluetooth[®] device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth[®] device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth[®] device, press the **DISC+AUX** button on the control panel to switch to Bluetooth[®] Streaming Audio.

For any Bluetooth[®] connectivity issues, reboot your cellular phone or device.

Trip Computer



The trip computer displays warnings and information for items such as the following:

- Energy Flow
- EV Odometer
- Fuel Economy
- Average Speed

- Trip Distance
- Range
- Coolant temp.
- Navigation

- Drive Aids
- Audio
- Tire Pressures
- Chassis Control

To change the displayed item on the trip computer (1), press the \square or \square > button (2) on the steering wheel.

Cruise Control

SETTING A CRUISING SPEED

- Press the cruise control button ① to turn on the system.
- With the vehicle at the desired speed, push down the control switch (2) to

 
SET – to enable cruise control.

 The cruising speed can be adjusted to a higher or lower speed by toggling the control switch (2) up or down.

CANCELING THE PRESET SPEED

• Push the **CANCEL** switch (2) or tap the brake pedal.





INTELLIGENT CRUISE CONTROL (if so equipped)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.

- To increase the distance to the vehicle ahead to be maintained by the ICC system, press the button (3) until the display shows the desired set distance, which is shown by the number of lines on the indicator (4).
- When a vehicle is detected ahead, a car icon will illuminate on the indicator (5) and your vehicle will reduce the speed to match the slower vehicle.

Navigation System (if so equipped)





Use the Infiniti controller (1) and \mathbf{OK} button (2) to navigate through the upper display screen.

- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

- 1. Press the **MENU** button (5) below the lower display.
- 2. Touch the "Destination" key (6) on the lower display.
- 3. Select the preferred destination setting method.
- 4. Enter the address number, street name, and city as prompted by the screen.

CANCELING A ROUTE

- 1. Press the **MENU** button (5) below the lower display.
- 2. Touch the "Cancel Route" key $\overline{7}$ on the lower display.

GUIDANCE VOLUME

- While guidance is being announced, the guidance volume can be adjusted by turning the audio system volume knob.
- The guidance volume can also be adjusted in the "Settings" menu.
 - 1. Press the **MENU** button (5) below the lower display.
 - 2. Touch the "Settings" key and then the "Navigation" key (8) on the lower display.
 - Next, touch the "Guidance Preferences" key. Use the "-" and "+" keys () on the "Guidance Volume" line to adjust the volume.







Infiniti InTouch[™] Services¹ (if so equipped)

Infiniti InTouch[™] Services combine personalized convenience settings and personal security features to compliment the Total Ownership Experience[®]. For more details on Infiniti InTouch Services or to enroll your vehicle, please visit **usa.infinitiintouch.com** or call **1-855-444-7244**.

To access Infiniti InTouch Services:

- 1. Press the MENU button (1) under the lower display.
- 2. Select the "InTouch Services" key (2) on the lower display.
 - Press the in-vehicle telematics **SOS** button (3) in case of an emergency, located above and in front of the rearview mirror.

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an Infiniti Owner Portal account.

(https://owners.infinitiusa.com/iowners/)

- 2. From your Infiniti Owner Portal account, enroll in Infiniti InTouch Services.
- 3. Download the Infiniti InTouch Services companion app from the App store and log in using your Infiniti Owner Portal ID and password.







Available services include, but are not limited to:

- Automatic Collision Notification
- Emergency Calling
- Enhanced Roadside Assistance
- Report Stolen Vehicle
- Alarm Notification
- Maintenance Alert
- Vehicle Health Report
- Scheduled Maintenance Notification
- Remote Door Lock/Unlock
- Remote Light and Horn
- Remote Engine Start/Stop
- Maximum Speed Alert
- Valet Alert
- Curfew Alert
- Destination Send-to-Vehicle
- Destination Assistance
- Connected Search

¹ Driving is serious business. Only use Infiniti InTouch Services and Infiniti InTouch Services Premier when safe to do so. Never program while driving. GPS mapping may not be detailed in all areas or reflect current road status. Services, including automatic crash notification and SOS, require an active subscription, and are dependent upon the telematics device being in an operative condition, its ability to connect to a wireless network, compatible wireless network availability, navigation map data, and GPS satellite signal receptions, the absence of which can limit or prevent the ability to reach Infiniti InTouch Services Customer Care or receive support. Services require compatible 3G GSM/GPRS cellular network provided by AT&T. 3G cellular network not available in all areas and/or available at all times. Cellular technology is evolving, and changes to cellular networks provided by independent companies are not within Infiniti's or Sirius XM Connected Vehicle Service's Inc.'s control. Certain vehicle services, including Google[®] compatible services, provided by independent companies are not within Infiniti's or Sirius XM connected Vehicle Service's Inc.'s control. Certain vehicle services is discontinued, Infinit InTouch services will not function unless equipment replacements, upgrades, or alternative network coverage are available at that time, which neither Infiniti nor Sirius XM can guarantee. Infiniti and Sirius XM are not responsible for associated costs that may be required for continued operation due to cellular network turndown or discontinuation (including equipment upgrades, if available, or roaming charges on alternative networks). 6 month trial subscription begins on your date of purchase or lease of your new Infiniti. Subsequently, your credit card (if on file) will be charged at the then current subscription rate and your service will renew automatically under the terms of your subscription. Standard text rates and/or data usage may provide at your subscription of subscription and your serv

Memo

Memo

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at **https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides.** If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2017/q50 or snap this barcode with an appropriate barcode reader.



INSPIRED PERFORMANCE