 


2016 Infiniti Q70 Hybrid

Quick Reference Guide



INFINITI.

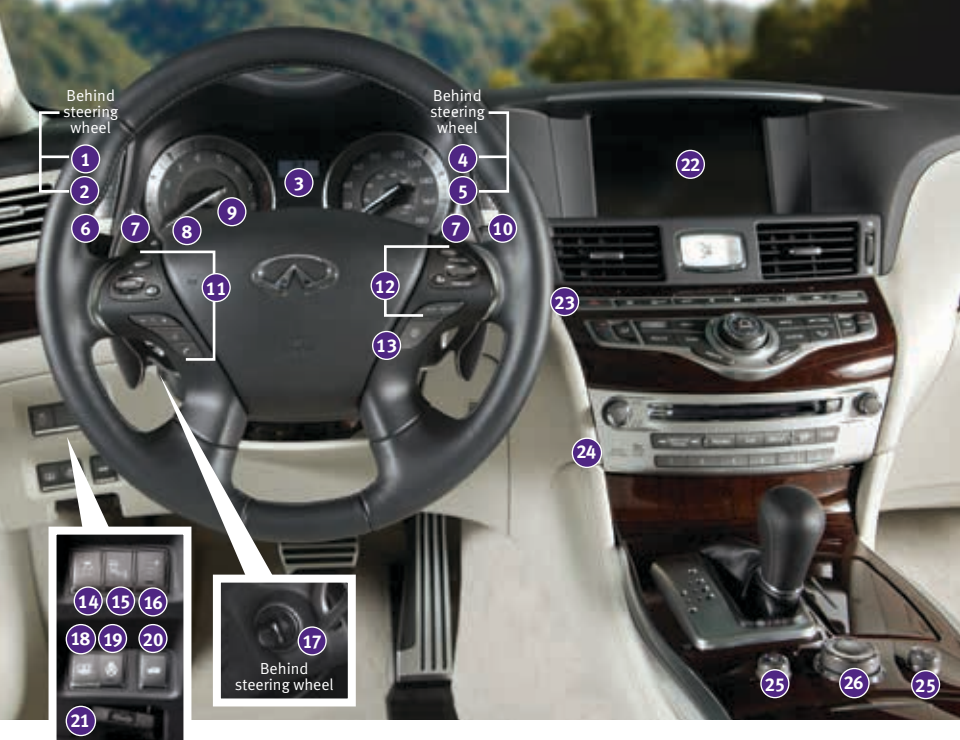

- | | |
|--|---|
| 1 ADAPTIVE FRONT LIGHTING SYSTEM (AFS) SWITCH* | 14 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* |
| 2 INSTRUMENT BRIGHTNESS CONTROL SWITCHES* | 15 BACK-UP COLLISION INTERVENTION (BCI) SYSTEM OFF SWITCH* |
| 3 VEHICLE INFORMATION DISPLAY* | 16 WARNING SYSTEMS SWITCH |
| 4 TRIP RESET SWITCH* | 17 TILT/TELESCOPIC STEERING WHEEL SWITCH* |
| 5 TRIP COMPUTER SWITCHES | 18 REAR SUNSHADE SWITCH* |
| 6 HEADLIGHT AND TURN SIGNAL SWITCH | 19 HEATED STEERING WHEEL SWITCH* |
| 7 PADDLE SHIFTERS | 20 TRUNK LID RELEASE SWITCH |
| 8 ASSIST CHARGE GAUGE | 21 HOOD RELEASE* |
| 9 EV INDICATOR LIGHT | 22 CONTROL PANEL DISPLAY SCREEN |
| 10 WIPER AND WASHER SWITCH | 23 HEATER AND AIR CONDITIONER (automatic) |
| 11 STEERING WHEEL SWITCHES FOR AUDIO/BLEETOOTH® | 24 AUDIO SYSTEM |
| 12 INTELLIGENT CRUISE CONTROL | 25 CLIMATE-CONTROLLED SEAT SWITCH* |
| 13 DYNAMIC DRIVER ASSISTANCE SWITCH* | 26 INFINITI DRIVE MODE SELECTOR |

*See your Owner's Manual for information.

new system features

Around View® Monitor with Moving Object Detection (MOD) (if so equipped) . . .	2
Approaching Vehicle Sound for Pedestrians (VSP) System	3
Automatic Anti-glare Mirrors	4
Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI) (if so equipped) .	4
Back-up Collision Intervention (BCI) (if so equipped)	4
Predictive Forward Collision Warning (PFCW) (if so equipped)	5
Forward Emergency Braking (FEB) (if so equipped)	5
Lane Departure Warning (LDW) (if so equipped)	5

essential information

Tire Pressure Monitoring System (TPMS)	6
Direct Response Hybrid™ System Warning Light	6
Hybrid Awareness	7
INFINITI Drive Mode Selector.	7
Warning Systems Switch (if so equipped)	8
Accessing the Front Cup Holders	8
Loose Fuel Cap	9
Fuel-filler Door	9
Clock Set/Adjustment	9

first drive features

INFINITI Connection™ (if so equipped)	10
INFINITI Intelligent Key System	12
Trunk Lid Release.	13
Power Front Seat Adjustments	13
Automatic Drive Positioner	14
Outside Mirror Control Switch.	14
Assist Charge Gauge	15
Starting/Stopping the Hybrid System	15
Headlight Control Switch.	15
Wiper and Washer Switch	16
Heater and Air Conditioner (automatic)	17
FM/AM/SiriusXM® Satellite Radio with CD/DVD (if so equipped) Player.	19
USB (Universal Serial Bus) Connection Port/iPod® Interface.	20
Conventional (Fixed Speed) Cruise Control	20
Intelligent Cruise Control (ICC) (if so equipped)	21

system guide

Trip Computer.	22
Bluetooth® Hands-free Phone System	23
System Operating Tips	23
Bluetooth® System with Navigation (if so equipped)	24
Bluetooth® System without Navigation (if so equipped)	25
Bluetooth® Streaming Audio with Navigation (if so equipped)	27
Navigation System (if so equipped)	28
DVD Player (if so equipped)	30
HomeLink® Universal Transceiver.	30



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2016/q70 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinityUSA.com.

 
new system features

Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)


- With the ignition switch in the ON position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:





Start from any Control Panel screen

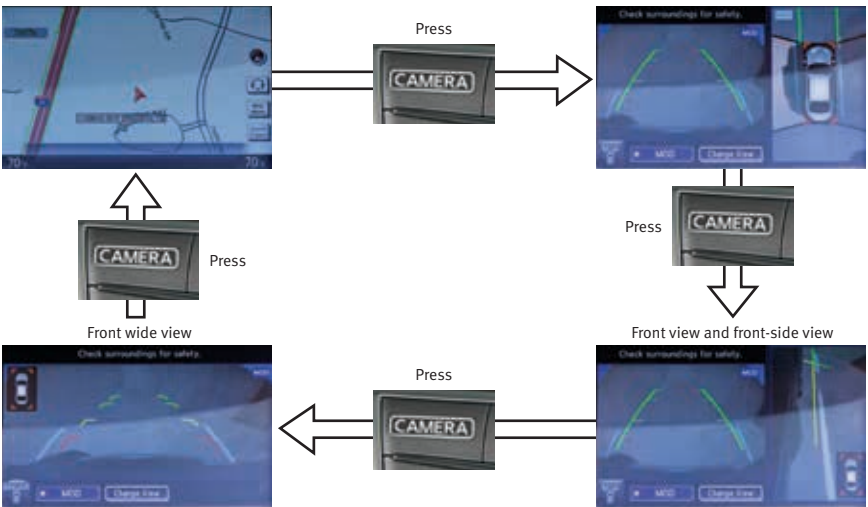

 - When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

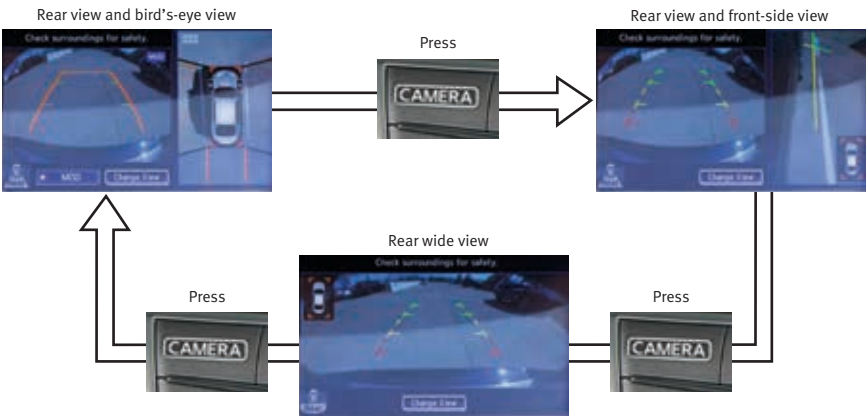


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **2**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **3** will not appear in the monitor.
- The distance between objects viewed on the Around View[®] Monitor (AVM) differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

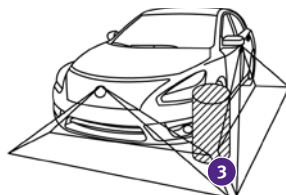  

MOVING OBJECT DETECTION (MOD)

 - If the MOD system detects moving objects surrounding the vehicle, a yellow frame **4** will be displayed on the camera image and a chime will sound.
- In the bird's-eye view, a yellow frame is displayed on those camera images (front, rear, right, left) where moving objects are detected.
- When the following are displayed:
 - Blue MOD icon **5**; the system is operative in this view.
 - Gray MOD icon **6**; the system is not operative in this view.
 - No MOD icon; the system is off.
- To temporarily turn the system on or off, touch the Sonar-MOD key **7**.

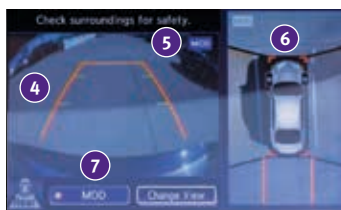

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

Approaching Vehicle Sound for Pedestrians (VSP) System

- The Vehicle Sound for Pedestrians system helps alert pedestrians to the presence of the vehicle when it is being driven at a low-speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 mph (30 km/h) while accelerating.
- This sound will activate again when decelerating to a speed less than 16 mph (25 km/h).

For more information, refer to the “**Hybrid System Overview (section Hybrid System)**” of your Owner's Manual.

new system features

Automatic Anti-glare Mirrors

- The inside rearview mirror and both outside mirrors are designed to automatically change reflection according to the intensity of the headlights of the vehicle following you.
- The anti-glare system will be automatically turned on when the ignition switch is in the ON position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI) (if so equipped)

- The Blind Spot Warning (BSW) system alerts the driver when another vehicle moves into the vehicle’s detection zone.
- An indicator light located near the outside mirror **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The Blind Spot Intervention® (BSI) system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The indicator light **2** will first illuminate in orange and then turn green before extinguishing. This indicates that the Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI) systems are operational.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Back-up Collision Intervention (BCI) (if so equipped)

- The Back-up Collision Intervention (BCI) system can help alert the driver of an approaching vehicle or objects behind the vehicle when backing out of parking spaces.
- The rear radar sensors detect the approaching vehicle from up to approximately 49 ft (15 m) from the bumper.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Predictive Forward Collision Warning (PFCW) (if so equipped)

- The Predictive Forward Collision Warning (PFCW) system can help alert the driver when there is sudden braking of the second vehicle traveling in front of the vehicle ahead that is traveling in the same lane.
- The PFCW uses a sensor in the front bumper to measure the distance of a second vehicle ahead in the traveling lane. The system operates at speeds above 3 mph (5 km/h).
- If there is a potential risk, the PFCW will warn the driver with a blinking driver assist system forward indicator and an audible warning tone will be heard.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Forward Emergency Braking (FEB) (if so equipped)

- The Forward Emergency Braking (FEB) system can assist the driver when there is risk of a forward collision with the vehicle in the traveling lane.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a collision, an audible tone will be heard, a visual warning will display and the vehicle will push up on the accelerator pedal. If the driver releases the accelerator pedal, the vehicle will begin applying the brakes; however, if the driver does nothing, the system will issue another audible and visual warning and apply the brakes harder.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Lane Departure Warning (LDW) (if so equipped)

- The Lane Departure Warning (LDW) system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 45 mph (70 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will chime and the orange LDW light **1** on the instrument panel will blink to alert the driver.
- The LDW system can be turned on and off through the Settings menu in the vehicle information display. To temporarily turn off the system, push the warning systems switch **2**.
- When the system is off, the indicator light **3** on the switch is off.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

essential information

Tire Pressure Monitoring System (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit an INFINITI retailer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
- Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information" (section 9) of your Owner's Manual for the location of the Tire and Loading Information label.



For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

Direct Response Hybrid™ System Warning Light

- This light will illuminate when the ignition switch is in the ON position and will extinguish when the hybrid system is started.
- The light will also illuminate when a malfunction occurs in the electric motor or hybrid system.
- When this light illuminates while driving, immediately stop the vehicle in a safe location and contact an INFINITI retailer.
- If the hybrid system warning light blinks while driving, it may indicate that the Li-ion battery charge is low and you cannot continue to drive.



For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

Hybrid Awareness

- Your vehicle is virtually silent in the electric mode. If you exit your vehicle while it is ON but the hybrid system is not running, the hybrid system will automatically start, informing you that the vehicle is still ON.
- Do not store your INFINITI Intelligent Key within the detection range of the vehicle. This may cause welcome lights and other functions to activate, creating unwanted battery drain.
- The hybrid system is designed for optimum efficiency and performance. Activation of the electric mode may vary with driving conditions and driver input. A full battery display does not indicate the vehicle should be in the electric mode.

For more information, refer to the “**Hybrid System Overview (section Hybrid System)**” of your Owner’s Manual.

INFINITI Drive Mode Selector

Turn the switch to one of the following positions to select the corresponding drive mode:

- 1 ● (Standard) - Used for standard or normal driving.
- 2 **SPORT** – The hybrid system and transmission will adjust, resulting in higher hybrid system rpm and a more aggressive shift pattern. In this mode, fuel economy may be reduced.
- 3 **SNOW** – Used on snowy roads or slippery areas. In this mode, hybrid system output is controlled to avoid wheel spin.
- 4 **ECO** – Adjusts hybrid system and transmission points to enhance fuel economy.



ECO PEDAL SYSTEM (if so equipped)

- With the INFINITI Drive Mode Selector switch in the **ECO** mode, the ECO pedal system assists the driver in improving fuel economy.
- The ECO pedal system applies force to make the accelerator pedal heavier, depending on the accelerator pedal operation.
- To change the ECO pedal reaction force:
 1. Press the **SETTING** button on the control panel.
 2. Touch the “ECO DRIVE” key.
 3. Touch the “ECO pedal” key and select one of the options below:
 - **OFF** – Turns the ECO pedal system off.
 - **Soft** – Softens the reaction force.
 - **Standard** – Reaction force is normal.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

essential information

Warning Systems Switch (if so equipped)

- The warning systems switch **1** will turn on or off any enabled warning systems, including the Lane Departure Warning and Blind Spot Warning systems. Systems that are not enabled will always remain off.



- When the warning systems switch **1** is turned off, the indicator light **2** on the switch is off. If the warning systems indicator light **2** is illuminated, the system is on. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.



- To enable or disable these systems, perform the following operation:

1. Press the **SETTING** button **3** on the control panel.
2. Using the INFINITI Controller **4**, highlight the "Driver Assistance" key **5** on the display. Then press the **ENTER** button **6**.
3. Highlight the corresponding warning system key **7**, select ON (enabled) or OFF (disabled) and press the **ENTER** button **6**.



 
For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

Accessing the Front Cup Holders


- To open the cup holders, push the lid **1** down and release.





For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

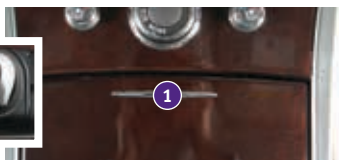

Loose Fuel Cap

  - A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

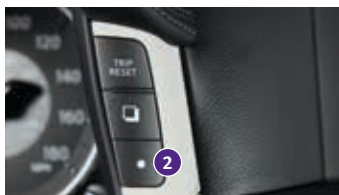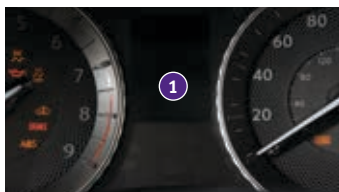

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Fuel-filler Door

The fuel-filler door is located on the passenger’s side of the vehicle.


- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- To open the door, push the upper left side of the door.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Clock Set/Adjustment

DIGITAL CLOCK ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Select the “Others” key.
 3. Select the “Clock” key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the  **BACK** button to return to the previous screen.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features



INFINITI Connection™* (if so equipped)

Infiniti Connection™ combines personalized convenience, concierge settings and personal security features to compliment the Total Ownership Experience®. For more details on Infiniti Connection or to enroll your vehicle, please visit www.InfinitiConnection.com or call 855-444-7244.

To access Infiniti Connection™:

1. Press the **INFO** button **1** on the control panel.
2. Select the “Infiniti Connection” key **2** on the display.



Available services include:

- Infiniti Personal Assistant – To access Infiniti Personal Assistant, select “Connect to Voice Menu” from the Infiniti Connection menu or touch the  key **3** on the map screen. At the voice prompt, say “Infiniti Personal Assistant” to be connected.
- Automatic Collision Notification – In case of air bag deployment, a signal is sent containing the vehicle location and customer information to notify the proper authorities.
- Emergency Call – This service provides emergency assistance by connecting the subscriber to an Infiniti Connection Specialist.
 - In case of an emergency, press the in-vehicle telematics **SOS** button **4**.
 - A Response Specialist will provide assistance based on the situation described by the vehicle’s occupant.
- Enhanced Roadside Assistance – Roadside Assistance can be accessed by touching the “Infiniti Connection” key **2** on the Info menu or the  key **3** on the map screen.
 - This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.
- My Schedule – Access your personal online Google Calendar™, hear details read via text-to-speech** and select a location as a destination via the Navigation System.



*INFINITI Connection™ is only available on vehicles equipped with an optional INFINITI Connection subscription service.

**Laws in some communities may restrict the use of text-to-speech. Check local regulations before using this feature.

- Report Stolen Vehicle – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to a local law enforcement agency.
- Remote Door Lock/Unlock – Remotely access your vehicle via an Infiniti Connection Response Specialist or the designated website to remotely lock or unlock your vehicle.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Scheduled Maintenance Notification – Receive scheduled maintenance notifications based on mileage data provided by your vehicle.
- Maintenance Alert – Receive notification of a vehicle system malfunction that triggers instrument panel warning lights.
- Destination Assistance – Receive point-of-interest assistance via a guided IVR (Interactive Voice Response) or a Response Specialist by touching the  key **3** on the map screen or the Infiniti Connection™ web portal.
- Destination Send-to-Vehicle – Find and download point-of interest information from Google Maps™ mapping service.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle’s Navigation System to conduct a point-of-interest search within a certain distance of the vehicle’s location.
- Drive Zone – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the Infiniti Connection™ web portal.
- Max Speed Alert – Set a maximum speed on the Infiniti Connection™ web portal. You will receive notifications if your vehicle exceeds the maximum speed setting.
- Mobile Information Service – Receive the latest news headlines, stock quotes and sports scores by setting up preferences on the Mobile Information Service page in the Infiniti Connection™ web portal.
- Valet Alert – Use to set up a 0.2-mile radius around your vehicle.
 - Activate alerts by touching the “Connect to Voice Menu” key on the Infiniti Connection screen or by touching the  key **3** on the map screen.
 - At the prompt, say “Valet Alert” and then “Activate” or “Deactivate”.

For more information, refer to the **“Viewing technical information (section 7)”** of your Navigation System Owner’s Manual.






first drive features

INFINITI Intelligent Key System

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- The INFINITI Intelligent Key system allows you to lock or unlock your vehicle, open your trunk and start the hybrid system.



LOCKING AND UNLOCKING YOUR VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch 1 once or press the  button 2 on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch 1 once; the corresponding door will unlock. Push the door handle request switch 1 again within 1 minute; all other doors will unlock, or
 - Press the  button 3 on the key fob to unlock the driver's side door. Press the  button 3 again; all other doors will unlock.
- To open the trunk, press the  button 4 for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button 5 for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the hybrid system according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the hybrid system will start.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

Trunk Lid Release

Use one of the following methods to unlatch the trunk lid then lift the lid to open the trunk:

- Push the trunk open request switch **1** under the trunk handle while carrying the INFINITI Intelligent Key with you (that is, in your pocket or purse).



- Press the  button **2** on the key fob for more than 1 second.





- From inside the vehicle, push the trunk lid release switch **3**.




For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Power Front Seat Adjustments


- To slide the seat forward or backward, push the switch  **1** forward or backward.
- To recline the seatback, push the switch  **2** forward or backward.

SEAT LIFTER

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the switch  **1** up or down.



LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the switch  **3**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

first drive features



Automatic Drive Positioner

 
- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner **1** memory.
- Follow these steps to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the ON position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your INFINITI Intelligent Key.
- To link a memorized position to your INFINITI Intelligent Key, press the UNLOCK button on the key fob after completing the previous step.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

Outside Mirror Control Switch

- To select the right or left side mirror, move the switch **1** right or left.
- Adjust each mirror to the desired position using the switch **2**.
- To fold the outside rearview mirrors, push the switch **3** to the  position. To unfold the outside rearview mirrors, push the switch **3** to the  position.

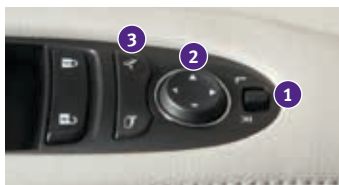

REVERSE TILT-DOWN FEATURE

- When backing up the vehicle, the right or left outside mirror can be selected to automatically turn downward.
 - Push the ignition switch to the ON position.
 - Move the shift lever to the **R (REVERSE)** position.
 - Choose the right or left outside mirror by operating the outside mirror control switch **1**.
 - The outside mirror surface moves downward.
- When one of the following conditions has occurred, the outside mirror surface will return to its original position.
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the central or neutral position.
 - The ignition switch is pushed to the OFF position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

Assist Charge Gauge

- This shows the power consumed **2** or generated **1** by the electric motor.

For more information, refer to the “**Hybrid System Overview (section Hybrid System)**” and the “**Instruments and controls (section 2)**” of your Owner’s Manual.



Starting/Stopping the Hybrid System

 
It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the hybrid system.
- The ready to drive indicator light **1** will illuminate in the meter, and you may begin driving the vehicle.



TURNING THE HYBRID SYSTEM OFF

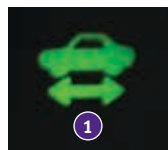

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the hybrid system off.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.


 
Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.


 


AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark or when the front wipers are used continuously. The autolight system will automatically turn off when it is light and the wipers are not in continuous use. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to the ON position. To deactivate the autolight system, turn the headlight control switch to the OFF,  position **1** or  position **2**.



first drive features

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash, but the lever does not latch, to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash, but the lever does not latch, and release the lever. The turn signal will automatically flash three times.

 
Choose the appropriate method to signal a lane change based on road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Wiper and Washer Switch

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Auto (**AUTO**) – Operates the rain-sensing wipers intermittently. To increase or decrease wiper sensitivity, twist the control ring **3**.
- 4** Low (**LO**) – Wipers operate at a continuous low-speed.
- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the washer. The wipers will operate several times.

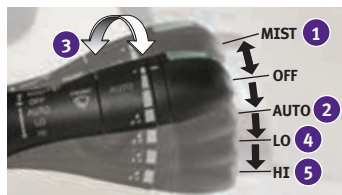

WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades. To move the wiper blades to the service position, follow this procedure:

- When the ignition switch is in the ON position, lift the windshield wiper and washer lever up to the **MIST** position **1** two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Lift the windshield wiper and washer lever up for more than 1 second or push the lever down to operate at any wiper speed.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.



Heater and Air Conditioner (automatic)

1 AUTO BUTTON

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.





2 CLIMATE BUTTON

- Press the **CLIMATE** button to adjust your automatic climate controls using the climate settings on the control panel display screen.

3 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

4 DRIVER'S SIDE MANUAL AIR FLOW CONTROL BUTTON





- Press the driver's side manual air flow button to manually control the driver's side air flow modes.
- The following air flow indicator modes will display on the control panel display screen:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the front defroster and foot vents.

first drive features



5 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- To manually adjust the passenger's side temperature, press the passenger's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.


6 PASSENGER'S SIDE MANUAL AIR FLOW CONTROL BUTTON

- Press the passenger's side manual air flow button to manually control the passenger's side air flow modes.
- The following air flow indicator modes will display on the control panel display screen:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the front defroster and foot vents.

7 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease the fan speed or press the right  button to increase the fan speed.


8 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature controls **3** and fan speed controls **7** to their maximum settings.




9 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  REAR to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

10 OUTSIDE AIR CIRCULATION BUTTON

- Press the outside air circulation " button to change the air circulation mode. When the indicator light illuminates, the flowing air is drawn from outside the vehicle.

11 AIR RECIRCULATION BUTTON

- Press the air recirculation " button to change the air circulation mode. When the indicator light illuminates, the flowing air is recirculated inside the vehicle.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or front defroster and foot vent mode .

12 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® Satellite Radio with CD/DVD (if so equipped) Player

1 ON•OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON•OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE/FOLDER KNOB

- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.
- Press the **AUDIO** button to access the audio settings screen.

3 SEEK•CAT/TRACK BUTTON

- To scan quickly and stop at the previous or next broadcast station, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- For satellite radio, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.

4 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, 6 for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** button 5 or **XM** button 6 then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service. For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

first drive features

USB (Universal Serial Bus) Connection Port/iPod® Interface

- The USB port **1** is located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



Conventional (Fixed Speed) Cruise Control (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4**.
- To turn off cruise control, push the **ON/OFF** switch **1**. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will extinguish.

 
For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.



Intelligent Cruise Control (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **1** for less than 1.5 seconds. The **CRUISE** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** and release it. Intelligent Cruise Control (ICC) will be set to the desired speed.
- Press the distance button **4** repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **7**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **3**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off ICC, press the **CRUISE ON/OFF** button **1**. The **CRUISE** indicator light **2** in the instrument panel will extinguish.

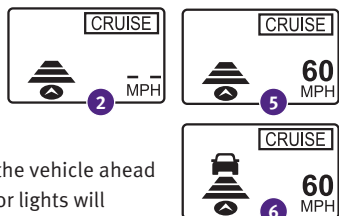

To set conventional (fixed speed) cruise control mode:






- When ICC is off, press the **CRUISE ON/OFF** button **1** and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** and release it. The **SET** indicator light will illuminate. Cruise control should be set to the desired speed.

To switch between the two cruise control modes:

 
 
- When one of the two cruise modes is in use, you must turn the system off and then turn it on again to select the other cruise control mode.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Trip Computer

- When the  button **1** is pressed, the following modes will appear on the vehicle information display **2**:
 - **MPG** – Displays the current fuel consumption.
 - **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - To reset the displayed MPG/MPH, press and hold the  button **3** for more than 1 second. Both the displayed MPG/MPH will reset at the same time.
 - **TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - To reset the elapsed time/miles, press and hold the  button **3** for more than 1 second. Both the elapsed time/miles will reset at the same time.
 - **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the exterior air temperature, including a low temperature warning feature.
 - **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **3** to cycle through the various setting modes.
 - Press the  button **1** to choose the selected menu.
- To reset Trip A and Trip B, press and hold the **TRIP RESET** button for more than 1 second.
- **WARNING** – Displays when a warning is present.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

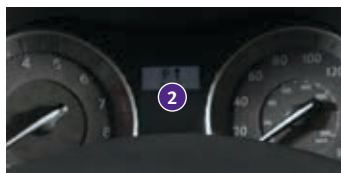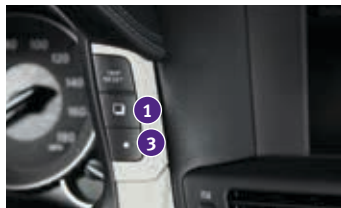


Bluetooth® Hands-free Phone System

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

 - If the Voice Recognition system does not recognize your voice commands:
 1. Be sure to wait for the tone/beep before speaking a command.
 2. Reduce background noise as much as possible by closing the windows and the moonroof.
 3. Make sure there are no other conversations on going in the car at the same time.
 4. Lower HVAC blower fan speed and point vents away from the ceiling microphone.
 5. Speak naturally. Speaking too fast, too slow, too soft or too loud makes voice recognition more difficult.
 6. Confirm the correct voice commands are being used. Glance at the screen to see the currently available commands.
 7. Train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- For vehicles not equipped with Navigation:
 - To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button on the steering wheel, and after the tone, say "Call Redial".
- For vehicles equipped with Navigation:
 - Refer to the "Voice recognition (section 9)" of your Navigation System Owner's Manual for more information.
- The "Help" command can be used to hear a list of available commands at any time.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  or  button on the steering wheel for 5 seconds.
- To go back to the previous command, say "Go back" or "Correction".
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.InfinitiUSA.com/bluetooth.

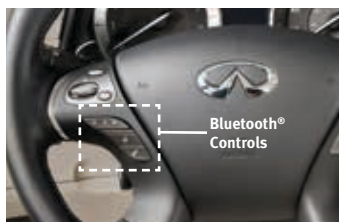


*Some jurisdictions prohibit the use of cellular telephones while driving.

 
 
system guide

Bluetooth® System with Navigation* (if so equipped)


CONNECTING PROCEDURE

The vehicle must be stationary when connecting the cellular phone.


1. Press the  button and select the “Connect Phone” key.
2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN, enter “1234” from the handset. (The PIN is assigned by INFINITI and cannot be changed.)
 - For cellular phones that support SSP (Simple Secure Pairing), confirm the PIN on the vehicle display matches the PIN displayed on the cellular phone.

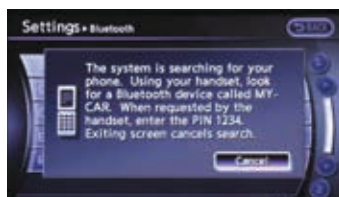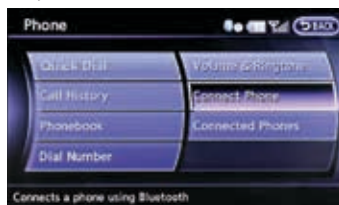

3. When connecting is complete, the screen will return to the “Phone” menu display.
 - Some phones may require you to accept certain permissions in order to enable features on your Bluetooth® system. During the Bluetooth® pairing process, please check your phone’s display for a pop-up with the request to grant phonebook access.
 - Granting phonebook access permission will allow your contacts to be downloaded to the vehicle Bluetooth® system. A pop-up may display on your phone stating that the Bluetooth® system would like to access your contacts and call history. Please select “Allow” or “Yes” to grant this permission. If your phone presents the option to not show the message again, please make sure that this item is checked. Doing so will ensure that any changes to your phonebook will be synced with the Bluetooth® system automatically.

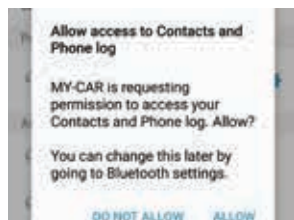 

PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone’s entire phonebook to the vehicle’s Bluetooth® system.
- If the phonebook does not download automatically, the vehicle’s phonebook may be set for up to 1,000 entries.
- To manually download entries:
 1. Press the  button and select the “Quick Dial” key.



*Some jurisdictions prohibit the use of cellular telephones while driving.


2. Select the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:

 
- “Copy from Call History” – to save a number from the Outgoing, Incoming or Missed Calls lists.
- “Copy from the Handset” – to save a number that has been downloaded from your handset to the vehicle.
- “Enter Number by Keypad” – to input the number and name manually.





MAKING A CALL


To make a call, follow this procedure:

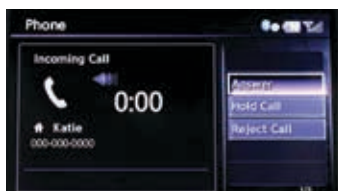1. Press the  button on the steering wheel. The “Phone” menu will appear on the control panel display.
2. Select the “Quick Dial”, “Call History”, “Phonebook” or “Dial Number” key.
3. Select the desired entry from the list.
4. Select “Call” to start dialing the number.




RECEIVING/ENDING A CALL

 - To accept the call, press the  button on the steering wheel or touch the “Answer” key.
- To reject the call, touch the “Reject Call” key.
- To hang up, press the  button or touch the “Hang up” key.

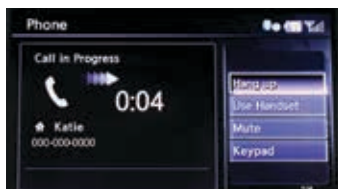

Bluetooth® System without Navigation* (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: “Connect Phone”. The system acknowledges the command and announces the next set of available commands.
3. Say: “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
4. Initiate pairing from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN, enter “1234” from the handset. (The PIN is assigned by INFINITI and cannot be changed).
5. Say a name for the cellular phone when the system asks to provide one. You can give the cellular phone a name of your choice.




*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide




PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as the phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

 
 
 
RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or please visit www.InfinitiUSA.com/bluetooth.

Bluetooth® Streaming Audio with Navigation (if so equipped)

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
 2. Select "Connected Devices".
 3. Select "Audio Player".
 4. Select the name of the device that you are attempting to connect as an audio player.
 5. Select "Select".
 6. Verify that the system confirms that the device has been selected as an audio player.
- Once your Bluetooth® device has been connected as an audio device, press the **DISC•AUX** button on the control panel to select the Bluetooth® Streaming Audio player.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone. Otherwise, try updating your cellular phone with the latest software.

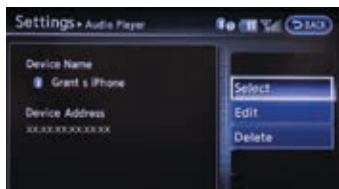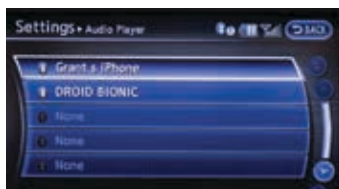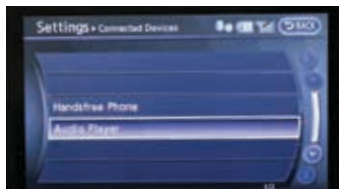

*Some jurisdictions prohibit the use of cellular telephones while driving.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or visit www.InfinitiUSA.com/bluetooth.



Navigation System (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

 
SYSTEM OPERATION

- Move through the menus and on-screen keys by sliding or rotating the INFINITI controller **1** to highlight an item on the screen and pressing the **ENTER** button **2** to select the highlighted item, or by touching the desired key on the touch-screen display.
- Press the **BACK** button **3** to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- Press the **MAP** button **4** to display the map. While following a programed route, press multiple times to change the type of route information.
- To display the vehicle, traffic (if so equipped), weather (if so equipped) or Voice Recognition information, press the **INFO** (information) button **5**.
- Press the **OFF** button **6** to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- To display system settings, press the **SETTING** button **7**.

SETTING A ROUTE

- To set a route, first ensure that the correct region is selected on the touch-screen.

1. Press the **DEST** button **8** on the control panel.
2. Select the “Change Region” key **9**.
3. Select the preferred region.

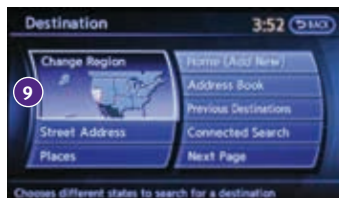


- Once this is complete, select your destination:

1. Press the **DEST** button **8** on the control panel.
2. Select the preferred destination setting method.
3. Enter the address number, street name, and city as prompted by the screen.

CANCELLING A ROUTE

 1. Press the **ROUTE** button **10** on the control panel.
2. Select the “Cancel Route” key **11**.

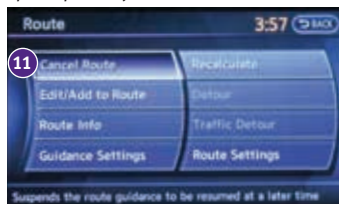

ZOOMING IN AND OUT

- On the map screen, turn the INFINITI controller **1** right or left to zoom in or out.

MOVING AROUND THE MAP

- To scroll the map, slide the INFINITI controller **1** in the direction you want to scroll.

CHANGING THE MAP VIEW

- It is possible to switch between two different map views: 2D, and bird's eye view (3D).

- To switch to the preferred map view:

 
1. With the map displayed, press the **ENTER** button **2** on the control panel.
2. Select the “Change View” key **12** to change the view to 2D or bird's eye view (3D).
3. Select the “Map Settings” key **13** to change the orientation of the map.



VOICE GUIDANCE

- To ensure voice guidance is activated:

1. Press the **ROUTE** button **10** on the control panel.
2. Select the “Guidance Settings” key **14**.
3. To ensure that voice guidance is activated, select the “Guidance Voice” key **15**. The indicator will be illuminated if voice guidance is activated.

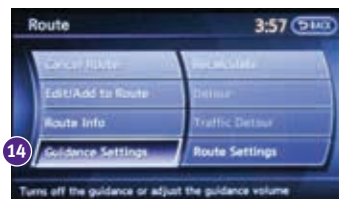

- To adjust the guidance volume, select the “Guidance Volume” key **16**.

- To hear the current guidance during a programed route, press the **VOICE** button **17**.



For more information, refer to your Navigation System Owner's Manual.

system guide

DVD Player (if so equipped)

 
- This system allows you to play video files via a DVD or CD from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



HomeLink® Universal Transceiver

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programming process. HomeLink should now activate your device.

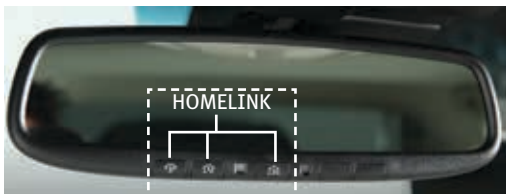

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.



INFINITI.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- **Vehicle Owner's Manual**
- **Infiniti Client Support**
1-800-662-6200
Support is always available if your Infiniti retailer cannot assist you or you would like to provide Infiniti directly with comments or questions.
- **Infiniti Roadside Assistance**
1-800-662-6200 (option 1)
As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.
- **Infiniti Elite® Extended Protection Program**
1-800-662-6200
Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.
- **Infiniti Personal Assistant**
1-888-774-1411
www.infinitipersonalassistant.com
Infiniti Personal Assistant™ provides Infiniti owners 24-hour access to an entire team of professional live personal assistants.
- **Infiniti Financial Services Client Support**
1-800-627-4437
For client support with your Infiniti Financial Services loan or lease.
- **Infiniti Financial Services**
www.infinitifinance.com
Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.
- **Owner Portal**
1-855-444-7244
www.owners.infinitiUSA.com/iowners
Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.
- **Infiniti Connection™**
1-800-334-7858
www.infinitiUSA.com/intouch/connection
The suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.
- **SiriusXM**
1-888-601-6296
For support with your SiriusXM subscription.
- **Infiniti USA.com**
www.infinitiUSA.com/bluetooth
Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.
- **Infiniti Electronic Quick Reference Guide**
(use Quick Response (QR) code or URL below)



To view detailed instructional videos, go to **www.infinitiownersinfo.mobi/2016/q70** or snap this barcode with an appropriate barcode reader.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at **<https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>**. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).