2017 **INFINITI QX80** QUICK REFERENCE GUIDE





To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2017/qx80 or snap this barcode with an appropriate barcode reader.

Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

VEHICLE OWNER'S MANUAL

• INFINITI CLIENT SUPPORT 1-800-662-6200

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

• INFINITI ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)

As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

- INFINITI ELITE® EXTENDED PROTECTION PROGRAM 1-800-662-6200 Infiniti Elite® Assurance Products provide you with quality, long-term protection and enhanced peace of mind.
- INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437 For client support with your Infiniti Financial Services loan or lease.
- INFINITI FINANCIAL SERVICES www.infinitifinance.com

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

- OWNER PORTAL 1-855-444-7244 www.owners.InfinitiUSA.com/iowners Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.
- INFINITI INTOUCH[™] 1-855-444-7244 usa.infinitiintouch.com This suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.
- SiriusXM RADIO 1-877-447-0011 For support with your SiriusXM subscription.
- INFINITI USA.COM www.InfinitiUSA.com/bluetooth

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

• INFINITI ELECTRONIC QUICK REFERENCE GUIDE

(Use the Quick Response (QR) code or URL on this page or on the back cover.)

Table of Contents

| Cockpit Overview | 1 |
|---|----|
| Instrument Panel | 3 |
| Meters and Gauges | 5 |
| Cruise Control (if so equipped) | 7 |
| Wiper and Washer Switch | 8 |
| Exterior Light Operation | 9 |
| Parking Brake | |
| USB Connection Port | 9 |
| Dual Head Restraint DVD System (if so equipped) | 10 |
| Navigation System | 11 |

| Clock Set/Adjustment |
|---|
| Connecting your Cellular Phone or Device via Bluetooth [®] |
| Bluetooth [®] Streaming Audio |
| Sun Visors |
| Head Restraint Adjustment 14 |
| Seat Adjustments 15 |
| Windows 15 |
| Fuel-filler Door |
| Door Handle Lock/Unlock Features |

Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



Cockpit Overview





Instrument Panel



Meters and Gauges



Meters and Gauges



Cruise Control (if so equipped)



- To activate the cruise control, push the **ON/OFF** switch ① on the steering wheel.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the switch (2) on the steering wheel down toward **COAST/SET** and release.
- To reset at a faster cruising speed, push and hold the switch ③ up toward **ACCEL/RES**. When the vehicle attains the desired speed, release the switch.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch ④.
- To turn off cruise control, push the **ON/OFF** switch 1.

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE(if so equipped)

- Press the vehicle-to-vehicle distance button (5) on the steering wheel repeatedly to change the set distance.
- When a vehicle is not detected ahead, the set distance and set vehicle speed indicator lights will illuminate (6) in set mode.
- When a vehicle is detected ahead, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate (7) in set mode.

TO USE CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE (if so equipped)

- While cruise control is off, push and hold the **ON/OFF** switch ① on the steering wheel for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push the switch (2) down toward **COAST/SET** and release it. The **SET** indicator light will illuminate.





Wiper and Washer Switch



Move the lever 1 up or down to one of the following positions to operate the windshield wipers:

- MIST One sweep operation
- OFF Wipers are OFF
- AUTO Rain-sensing automatic wipe
- LO Continuous wipe, slow
- HI Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring (2).

Pull the lever (1) toward you operate the windshield washer.





REAR WIPER AND WASHER

Intermittent (**INT**) — Rear wiper operates intermittently.

Low (**ON**) — Rear wiper operates at a continuous low-speed.

Push the lever forward (3) to activate the rear washer.

RAIN-SENSING AUTOMATIC WIPER SYSTEM

To set the Rain-Sensing Automatic Wiper System:

• Push the lever down to the **AUTO** position (4).

The rain sensor sensitivity level can be adjusted by:

- Turning the knob toward the front (High) for High Sensitive Operation (5).
- Turning the knob toward the rear (Low) for Low Sensitive Operation 6.

To turn the Rain-Sensing Automatic Wiper System off, push the lever to the **OFF** position.

Exterior Light Operation





- Side lights, license plate lights and combination meter lighting ON position
- 2 Headlight ON position
- Automatic (AUTO) headlight mode ON position (headlights switch on/off automatically depending on ambient light conditions/daytime light system)
- **OFF** position



- 5 Front fog light switch
- - 6 Push the headlight switch forward for the high beams. For High Beam Auto-Dimming (Auto position):
 - When the vehicle speed is less than 17 mph (27 km/h), the headlight returns to low beam.
 - To disable high beam auto-dimming, turn headlight switch to Headlight ON position (2).

7 Pull the headlight switch rearward to flash the high beams. For normal headlight operation, leave the exterior light switch in the AUTO position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Parking Brake

To apply the parking brake, fully depress the parking brake pedal (1).

To release the parking brake:

- Firmly apply the foot brake (2).
- Depress the parking brake pedal (1) and the parking brake will be released. Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



USB Connection Port



• The USB port (1) is located in the center console in front of the armrest. Compatible audio and video files stored on a USB device can be played through the vehicle's audio system and front display.

Dual Head Restraint DVD System (if so equipped)



With this entertainment system, you can play video files on both the front and rear display screens.

Watching a DVD:

- Insert a DVD into the DVD slot ① and the DVD will play automatically. The front display will only work when the vehicle is in park and the parking brake is engaged.
- Press the **DISC**•AUX button (2) on the control panel to bring up the DVD menu and display settings. Use the touch-screen and the Infiniti controller to select the menu items.

Watching videos from a USB device:

- Connect your compatible device to the USB connection port or AUX jacks located inside the tray in the center console box.
- The source can be changed on the rear displays using the remote by pressing the **SOURCE** button.





REAR DISPLAYS

To turn the rear displays on and off from the front seats:

- 1. Press the **SETTING** button (3) on the control panel.
- 2. Select the "Rear Display" key on the display.
- 3. Toggle the "L" (Left) or "R" (Right) Display ④ ON or OFF.
- 5 POWER Turn display screen on and off
- **6 DISPLAY SELECT** Change display controls between right and left screen

7 SOURCE – Change video source

8 MENU – Change menu display

9 ENTER/Selection Buttons – Control and select buttons

10 BACK – Previous menu button

11 SETUP – Bring up display menu

Video Controls – Play, stop, fast forward and rewind buttons

13 Volume – Control audio level

Navigation System

the guidance or adjust the guidance volume





Use the Infiniti controller (1) and **ENTER** button (2) to navigate through the center display screen.

- Press the **DBACK** button 3 to return to the previous screen.
- Press the **MAP** button (4) to display the map.

SETTING A ROUTE

- To set a route, first ensure that the correct region is selected on the touch-screen. 1. Press the **DEST** button (5) on the control panel.
 - 2. Select the "Change Region" key (6).
 - 3. Select the preferred region.
- Once this is complete, select your destination.
 - 1. Press the **DEST** button (5) on the control panel.
 - 2. Select the preferred destination setting method.
 - 3. Enter the address number, street name, and city as prompted by the screen.

CANCELING A ROUTE

- 1. Press the **ROUTE** button ⑦ on the control panel.
- 2. Select the "Cancel Route" key (8).

VOICE GUIDANCE

- To activate voice guidance:
 - 1. Press the **ROUTE** button ⑦ on the control panel.
 - 2. Select the "Guidance Settings" key (9).
 - To ensure that voice guidance is activated, select the "Guidance Voice" key (10). The indicator illuminates if voice guidance is activated.
- To adjust the guidance volume, select the "Guidance Volume" key (1).
- To hear the current guidance during a programed route, press the **VOICE** button (12). Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Clock Set/Adjustment

DIGITAL CLOCK WITH NAVIGATION

To adjust the time and the appearance of the clock on the display:

- 1. Press the **SETTING** button on the control panel.
- 2. Select the "Others" key.
- 3. Select the "Clock" key.



ANALOG CLOCK

To set the clock forward, press the button (1).

To set the clock backward, press the button 2.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Voice Recognition

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the √ button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the steering wheel.



Connecting your Cellular Phone or Device via Bluetooth®*

CONNECTING PROCEDURE

The vehicle must be stationary when connecting the cellular phone.

- 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
- 2. Touch the "Connect Bluetooth" key.
- 3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the hands-free phone system. Touch the "Yes" key.
- 4. Initiate connecting from the cellular phone.

For any Bluetooth[®] connectivity issues, reboot your cellular phone or device.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Streaming Audio*

- 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
- 2. Select "Connected Devices".
- 3. Select "Audio Player".
- 4. Select the name of the device that you are attempting to connect as an audio player.
- 5. Select "Select".
- 6. Verify that the system confirms that the device has been selected as an audio player. For any Bluetooth[®] connectivity issues, reboot your cellular phone or device.

*Some jurisdictions prohibit the use of cellular telephones while driving.





Sun Visors





1 Pull down the sun visor to block glare from the front.

2 Remove the sun visor from the center mount by lifting it slightly and swing it to the side to block glare from the side window.

Draw out the extension sun visor from the main sun visor to block further glare.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Head Restraint Adjustment



To raise the head restraint: Pull the head restraint up.

To lower the head restraint: Push and hold the lock knob (1) and push the head restraint down.

Make sure the head restraint is fully engaged in position after any adjustment.

Seat Adjustments



- To slide the seat forward or backward, push the + switch (1) forward or backward.
- To recline the seatback, push the \leftarrow \bigcirc switch \bigcirc forward or backward.

SEAT LIFTER

• To adjust the angle of the front portion or height of the seat, push the front or rear end of the () switch () up or down.

LUMBAR SUPPORT

• Push each side of the the adjusting switch 3 to adjust the seat lumbar area until the desired position is achieved.

SEAT/STEERING POSITIONING ON EXIT

• The shift lever must be in **P (PARK)** position with the ignition switch in the OFF position.



 The entry/exit function can be activated or canceled by pushing and holding the **SET** switch (4), located on the driver's side door, for more than 10 seconds.

limitations, and additional operating and feature information.

Please see your Owner's Manual for important safety information, system



All power windows can be operated through the

The power windows can be opened from outside

the vehicle using the Intelligent Key as follows:

To unlock the vehicle and open the windows

the Intelligent Key for about 3 seconds after

main switch on the driver's door. Power windows open/close Disable passengers' window operation POWER WINDOW CONVENIENCE OPENING/

Using the mechanical key:

Windows

CLOSING FEATURE

the door is unlocked.

Insert the mechanical key and turn the driver's door key cylinder to the rear of the vehicle for longer than 1 second. The door is unlocked and the window keeps opening while turning the key.

To close the windows, turn the driver's door key cylinder to the front of the vehicle for longer than 1 second. The door is locked and the window keeps closing while turning the key.





Fuel-filler Door



To open the fuel-filler door, unlock the vehicle and gently push the front side of the fuel-filler door.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Door Handle Lock/Unlock Features

| Navigation | Volume & Beeps | Display | |
|------------|--|-------------------|--|
| Audio | Rear Display | 2 Comfort | |
| | Common de la common | Clock | |
| | | Language & Units | |
| Bluetooth | Others 1 | Voice Recognition | |

SELECTIVE DOOR UNLOCK

Selective Door Unlock allows the driver to choose which doors will lock and unlock via any door unlock operation.

When Selective Door Unlock is turned to ON, only the driver's door is unlocked first after the door unlock operation.

- To reach Selective Door Unlock:
 - 1. Place the ignition switch in the ON position.
 - 2. In the display, select the "Settings" key.
 - 3. Select the "Others" (1) key.
 - 4. Select the "Comfort" (2) key.
 - 5. Go to "Selective Door Unlock" and select the "ON" key.

When the door handle request switch on the driver's or front passenger's side door is pushed to be unlocked, only the corresponding door is unlocked first.

All the doors can be unlocked if the door unlock operation is performed again within 1 minute.

When Selective Door Unlock is turned to OFF, all the doors will be unlocked after the door unlock operation is performed once.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at **https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides.** If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2017/qx80 or snap this barcode with an appropriate barcode reader.

INSPIRED PERFORMANCE