

QX80

2018 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2018/qx80 or snap this barcode with an appropriate barcode reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

- **VEHICLE OWNER'S MANUAL**
- **INFINITI CLIENT SUPPORT 1-800-662-6200**
Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.
- **INFINITI ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)**
As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.
- **INFINITI ELITE® EXTENDED PROTECTION PROGRAM 1-800-662-6200**
Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.
- **INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437**
For client support with your Infiniti Financial Services loan or lease.
- **INFINITI FINANCIAL SERVICES www.infinitifinance.com**
Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.
- **OWNER PORTAL 1-855-444-7244 www.owners.infinitiUSA.com/iowners**
Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.
- **INFINITI INTOUCH™ 1-855-444-7244 usa.infinitiintouch.com**
The suite of services that is your direct link to personal security, convenience and confidence.
- **SiriusXM® RADIO 1-877-447-0011**
For support with your SiriusXM® subscription.
- **INFINITI USA.COM www.infinitiUSA.com/bluetooth**
Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.
- **INFINITI ELECTRONIC QUICK REFERENCE GUIDE**
(use the Quick Response (QR) code or URL on this page or on the back cover)

Table of Contents

Cockpit Overview.....	1	Voice Recognition.....	12
Instrument Panel.....	3	Connecting your Cellular Phone or Device via Bluetooth®.....	13
Meters and Gauges.....	5	Bluetooth® Streaming Audio.....	13
Cruise Control.....	7	Sun Visors.....	14
Wiper and Washer Switch.....	8	Windows.....	14
Exterior Light Operation.....	9	Seat Adjustments.....	15
Parking Brake.....	9	Head Restraint Adjustment.....	15
USB Connection Port.....	9	Fuel-filler Door.....	16
Infiniti Mobile Entertainment System (MES) (if so equipped).....	10	Smart Rear View Mirror (if so equipped).....	16
Navigation System.....	11	Infiniti InTouch™ Services (if so equipped).....	17
Clock Set/Adjustment.....	12		

Additional information about your vehicle is also available in your Owner's Manual, InTouch™ Owner's Manual and at www.InfinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)", the "Display screen, heater and air conditioner, and audio system (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

Cockpit Overview



4

3

2

5

1

6

7

1

Cockpit Overview

- 1 Cruise control switch
- 2 Wiper and washer switch
- 3 Vehicle information display
- 4 Vehicle information display brightness switches/Trip odometer switch
- 5 Headlight/Turn signal/High Beam/Fog Light Switch
- 6 Navigation/Touch screen/Audio control switches
- 7 Bluetooth®/Voice Recognition system switches

Instrument Panel



1

2

3

4

5

6

8

7

3

Instrument Panel

- ❶ Multi-function touch-screen/RearView Monitor display/Around View® Monitor display
- ❷ Infiniti multi-function controller
- ❸ Audio system
- ❹ Climate control panel
- ❺ Shift lever
- ❻ Lower center console switch panel
 - 2nd row seat release buttons
 - Climate-controlled seat switches (if so equipped)
 - Front passenger air bag status light
- ❼ Parking brake
- ❽ Switch panel
 - Power liftgate button
 - Safety Shield OFF switch
 - Blind Spot/RCTA OFF switch (if so equipped)
 - Power Liftgate ON/OFF switch
 - Steering wheel heater

Meters and Gauges



Meters and Gauges

- 1 Engine coolant temperature gauge
- 2 Tachometer
- 3 Shift lever indicator
- 4 Vehicle information display
- 5 Speedometer
- 6 Fuel gauge

Cruise Control

SETTING A CRUISING SPEED

- Press the **CRUISE ON/OFF** switch ① to turn on the system.
- With the vehicle at the desired speed, push down the switch ② to **COAST/SET** to enable cruise control.
- The cruising speed can be adjusted to a higher or lower speed by toggling the control switch ② up or down.

CANCELING THE PRESET SPEED

- Push the **CANCEL** switch ③ or tap the brake pedal.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.


- To increase the distance to the vehicle ahead to be maintained by the ICC system, push the distance switch ④ until the display shows the desired set distance, which is shown by the number of lines on the set distance indicator ⑤.
- When a vehicle is detected ahead, a car icon will illuminate on the vehicle ahead detection indicator ⑥ and your vehicle will reduce the speed to match the slower vehicle.

To use Conventional (fixed speed) Cruise Control mode (if so equipped):


- While cruise control is off, push and hold the **CRUISE ON/OFF** switch ① for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push the switch ② down toward **COAST/SET** and release it. The **SET** indicator light will illuminate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

CONVENTIONAL CRUISE CONTROL (if so equipped)

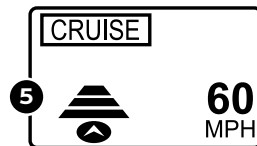

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

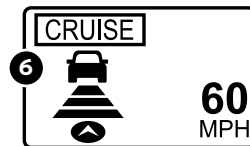

Wiper and Washer Switch



Move the lever ① up or down to one of the following positions to operate the windshield wipers:

- MIST** One sweep operation
- OFF** Wipers are OFF
- AUTO** Rain-sensing automatic wipe
- LO** Continuous wipe, slow
- HI** Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring ②.

Pull the lever ① toward you operate the windshield washer.




REAR WIPER AND WASHER

Intermittent (**INT**) – Rear wiper operates intermittently.

Low (**ON**) – Rear wiper operates at a continuous low-speed.

Push the lever forward ③ to activate the rear washer.

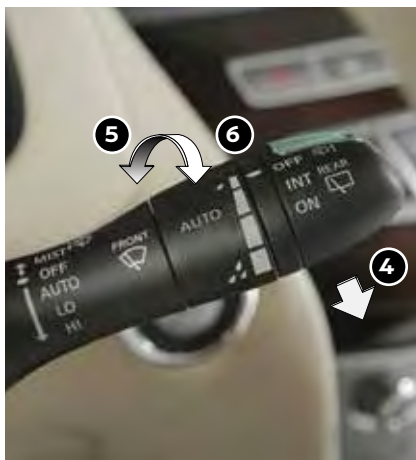

RAIN-SENSING AUTOMATIC WIPER SYSTEM

To set the Rain-Sensing Automatic Wiper System:

- Push the lever down to the **AUTO** position ④.


The rain sensor sensitivity level can be adjusted by:

- Turning the knob toward the rear (Low) for Low Sensitive Operation ⑤.
- Turning the knob toward the front (High) for High Sensitive Operation ⑥.

To turn the Rain-Sensing Automatic Wiper System off, push the lever to the **OFF** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Exterior Light Operation

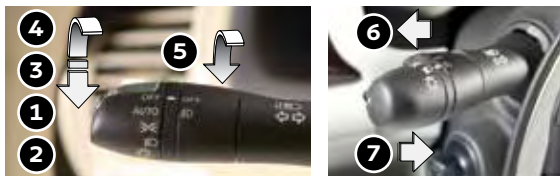

- 1 Side lights, license plate lights and combination meter lighting ON position
- 2 Headlight ON position
- 3 Automatic (**AUTO**) headlight mode ON position (headlights switch on/off automatically depending on ambient light conditions/daytime running light system)
- 4 **OFF** position
- 5 Front fog light switch
- 6 Push the headlight switch forward for the high beams.
For High Beam Auto-Dimming (Auto position):
 - When the vehicle speed is less than 17 mph (27 km/h), the headlight returns to low beam.
 - To disable high beam auto-dimming, turn headlight switch to Headlight ON position ②.
- 7 Pull the headlight switch rearward to flash the high beams.

For normal headlight operation, leave the exterior light switch in the **AUTO** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Parking Brake

To apply the parking brake, fully depress the parking brake pedal ①.

To release the parking brake:

- Firmly apply the foot brake ②.
- Depress the parking brake pedal ① and the parking brake will be released.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



USB Connection Port



The USB port ① is located on the center console. Compatible audio and video files stored on a USB device can be played through the vehicle's audio system and front display.

Please see your InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Infiniti Mobile Entertainment System (MES) (if so equipped)




With this entertainment system, you can play video files on both the front and rear display screens.

Watching a DVD:

- Insert a DVD into the DVD slot ① and the DVD will play automatically. The front display will only work when the vehicle is in park and the parking brake is engaged.
- Press the **DISC** button ② on the control panel to bring up the DVD menu and display settings.

Watching videos from a USB device:

- Connect your compatible device to the USB connection port or AUX jacks located inside the tray in the center console box.
- The source can be changed on the rear displays using the remote by pressing the **HOME** button ⑥.

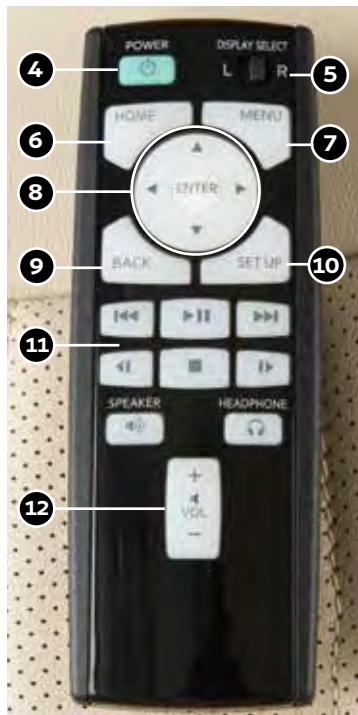

REAR DISPLAYS

To turn the rear displays on and off from the front seats:

1. Press the **AUDIO** button ③ on the control panel.
2. Select the "Rear Display" key on the display.

- ④ **POWER** – Turn display screen on and off
- ⑤ **DISPLAY SELECT** – Change display controls between right and left screen
- ⑥ **HOME** – Change video source
- ⑦ **MENU** – Change menu display
- ⑧ **ENTER/Selection Buttons** – Control and select buttons
- ⑨ **BACK** – Previous menu button
- ⑩ **SETUP** – Bring up display menu
- ⑪ **Video Controls** – Play, stop, fast forward and rewind buttons
- ⑫ **Volume** – Control audio level

Please see your InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Navigation System



Use the Infiniti controller ① and **ENTER** button ② to navigate through the center display screen.

- Press the **BACK** button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the touch-screen.

1. Press the **NAVI** button ⑤ on the Infiniti controller.
2. Touch the "Destination Menu" key ⑥ on the display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.

CANCELING A ROUTE

1. Press the **NAVI** button ⑤ on the Infiniti controller.
2. Touch the "Cancel Route" key ⑦.

Please see your InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Clock Set/Adjustment



To adjust the time and the appearance of the clock on the display:

Press the **SETTING** button on the control panel.

Locate and touch the "Clock" key to adjust "On-Screen Clock", "Daylight Savings Time", "Clock Format (24h)", and "Time Zone" on the display.

The time can be adjusted through "Offset Adjustment" ① by adjusting the minutes and/or hours forward or backward. The current clock time can be set up to a difference of 12 hours and 59 minutes.

ANALOG CLOCK

To set the clock forward, press the button ②.

To set the clock backward, press the button ③.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Voice Recognition

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- Press the  button ① on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button ① on the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Connecting your Cellular Phone or Device via Bluetooth®*

Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **SETTING** button on the control panel.
2. Select the "Phone/Mail" key.
3. Select "Connect Device".
4. Select "Add New (X/5 Free)".
5. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Bluetooth® Streaming Audio



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the **MEDIA** button ① on the control panel to switch to Bluetooth® Streaming Audio.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

Please see your InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Sun Visors



- 1 Pull down the sun visor to block glare from the front.
- 2 Remove the sun visor from the center mount by lifting it slightly and swing it to the side to block glare from the side window.
- 3 Draw out the extension sun visor from the main sun visor to block further glare.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Windows

All power windows can be operated through the main switch on the driver's door.

- 1 Power windows open/close
- 2 Disable passengers' window operation

POWER WINDOW CONVENIENCE OPENING/CLOSING FEATURE

To unlock the vehicle and open the windows simultaneously, press and hold the  button **3** on the Intelligent Key for about 3 seconds after the door is unlocked.

To stop opening, release the  button **3**.


The window cannot be closed using the Intelligent Key.

Using the mechanical key:


Insert the mechanical key and turn the driver's door key cylinder to the rear of the vehicle for longer than 1 second. The door is unlocked and the window keeps opening while turning the key.

To close the windows, turn the driver's door key cylinder to the front of the vehicle for longer than 1 second. The door is locked and the window keeps closing while turning the key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

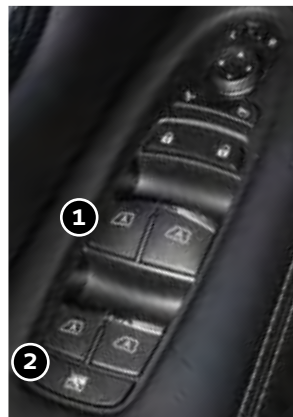

Seat Adjustments

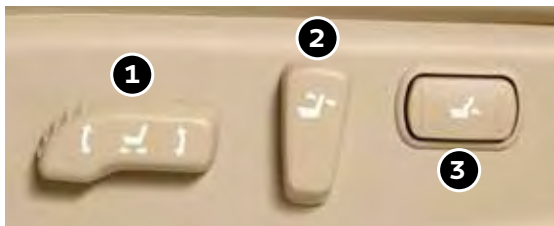

- To slide the seat forward or backward, push the ←→ switch ① forward or backward.
- To recline the seatback, push the ↑↓ switch ② forward or backward.

SEAT LIFTER

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the (↔) switch ① up or down.

LUMBAR SUPPORT

- Push each side of the ↔ adjusting switch ③ to adjust the seat lumbar area until the desired position is achieved.

SEAT/STEERING POSITIONING ON EXIT

- The shift lever must be in P (PARK) position with the ignition switch in the OFF position.
- The entry/exit function can be activated or canceled by pushing and holding the **SET** switch ④, located on the driver's side door, for more than 10 seconds.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Head Restraint Adjustment



To raise the head restraint: Pull the head restraint up.
To lower the head restraint: Push and hold the lock knob ① and push the head restraint down.

Make sure the head restraint is fully engaged in position after any adjustment.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Fuel-filler Door



To open the fuel-filler door, unlock the vehicle and gently push the front side of the fuel-filler door.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Smart Rear View Mirror (if so equipped)



You can switch between the conventional rearview mirror mode and Smart Rear View Mirror mode (camera view mode) by using the mode select lever ①.

- When the Smart Rear View Mirror mode is on, the settings menu can be selected by pressing the menu button ②.
- Press the adjustment buttons ③ to adjust the following settings:
 - Brightness
 - Down/Up
 - Indication
 - Language
 - Rotation
 - Dimming Mirror

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Infiniti InTouch™ Services (if so equipped)

Infiniti InTouch™ Services combine personalized convenience settings and personal security features to compliment the Total Ownership Experience®. For more details on Infiniti InTouch Services or to enroll your vehicle, please visit



usa.infinitiintouch.com or call **1-855-444-7244**.

To access Infiniti InTouch Services:

1. Press the **SETTING** button ① on the Infiniti controller.
2. Select the "InTouch Services" key ② on the display.
 - In case of an emergency, press and release the in-vehicle telematics **SOS** button ③, located above the rearview mirror. A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an Infiniti Owner Portal account. (<https://owners.infinitiusa.com/iowners/>)
2. From your Infiniti Owner Portal account, enroll in Infiniti InTouch Services.
3. Download the Infiniti InTouch Services companion app from the App store and log in using your Infiniti Owner Portal ID and Password.

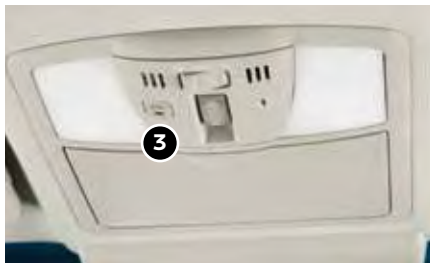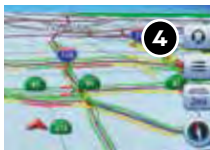

Available services include, but are not limited to:

- Automatic Collision Notification
- Alarm Notification
- Maintenance Alert
- Scheduled Maintenance Notification
- Report Stolen Vehicle
- Emergency Call
- Remote Door Lock/Unlock
- Remote Engine Start/Stop
- Remote Horn/Lights
- My Schedule
- Destination Send-to-Vehicle
- Connected Search
- Drive Zone
- Maximum Speed Alert
- Mobile Information Service
- Valet Alert

 
The following services can also be accessed by touching the headset icon ④

- Infiniti Personal Assistant
- Enhanced Roadside Assistance

This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.

Please see your InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Memo



Printing November 2017
QR18EA OZ62UO
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2018/qx80 or snap this barcode with an appropriate barcode reader.



I N F I N I T I .