

# 2014 Infiniti | Service and Maintenance Guide



INFINITI®

## VEHICLE IDENTIFICATION

Vehicle Identification Number (VIN) \_\_\_\_\_

Delivery Date \_\_\_\_\_

Warranty Start Date \_\_\_\_\_

Mileage at Delivery \_\_\_\_\_

Model Year \_\_\_\_\_

Selling Dealer \_\_\_\_\_

Selling Dealer Phone \_\_\_\_\_

# TABLE OF CONTENTS



<b>OWNER'S LITERATURE INFORMATION</b> .....	2
<b>INTRODUCTION</b>	
Infiniti Maintenance .....	3
Why Infiniti Service? .....	4
Extended Service Products .....	5
Genuine Infiniti Collision Parts .....	7
<b>SCHEDULED MAINTENANCE GUIDE</b>	
Determining the Proper Maintenance Interval .....	8
Explanation of Scheduled Maintenance Items .....	9
Maintenance Schedules .....	13
Optional Premium Maintenance Upgrade .....	39
HEV Li-ion Battery Replacement Record .....	41
Maintenance Log .....	43

# OWNER'S LITERATURE INFORMATION

## INDEX OF TOPICS

Radio/CD/Heater/AC Operation . . . . .

Starting and Driving Your Vehicle . . . . .

Security System Operation . . . . .

Changing a Flat Tire . . . . .

New Vehicle Limited Warranty . . . . .

Federal Emission Control Warranties . . . . .

California Emission Control Warranties . . . . .

Tire Pressure/Rotation . . . . .

Tire Warranties/Safety Information . . . . .

Consumer Affairs Assistance . . . . .

Do It Yourself Information . . . . .

General Maintenance . . . . .

## WHERE TO FIND INFORMATION

*Owner's Manual: chapter 4*

*Owner's Manual: chapter 5*

*Owner's Manual: chapter 2*

*Owner's Manual: chapter 6*

*"2014 New Vehicle Limited Warranty" section in Warranty Information Booklet*

*"Federal Vehicle Emission Control Limited Warranties" section in Warranty Information Booklet*

*"California Vehicle Emission Control Warranties" section in Warranty Information Booklet*

*Owner's Manual: chapter 8*

*Individual tire manufacturer warranty sections in Warranty Information Booklet*

*"Nissan's Customer Care Program" section in Warranty Information Booklet*

*Customer Care/Lemon Law Information Booklet\**

*Owner's Manual: chapter 8*

*Owner's Manual: chapter 8*

\* Not applicable outside of the United States

## **Maintain Your Investment**

Preventative scheduled maintenance is an important investment to optimize the performance, durability, reliability, safety and resale value of your Infiniti. Scheduling your vehicle's maintenance at the recommended intervals will ensure your vehicle is running at its best. We want you to enjoy your Infiniti vehicle. This Service and Maintenance Guide is designed to help you make sure your vehicle receives proper and timely maintenance that is necessary. Key services are explained in detail, along with an outline of scheduled maintenance to help you maintain your vehicle. Your local Infiniti retailer can assist you in determining the best schedule based on your driving habits and local conditions.

Failure to perform scheduled maintenance may result in excluding portions of your vehicle from warranty coverage and may reduce the performance, durability, reliability, safety and/or resale value of your vehicle. See your Warranty Information Booklet and Owner's Manual for details.

## WHY INFINITI SERVICE?\*

To preserve the quality and safety of your vehicle, an authorized Infiniti retailer is recommended for maintenance or repair. Only an authorized Infiniti retailer offers you these advantages:

- Factory Trained and ASE certified technicians
- Immediate access to warranty service history and factory technical information
- Latest diagnostic, special tools and service techniques
- Genuine Infiniti Parts that meet Infiniti's demanding standards
- 12 month/12,000 mile parts and labor limited warranty when Genuine Infiniti Parts are installed by your retailer
- Complimentary Multi-Point Inspections (at participating retailers)
- Clear, up-front estimates
- Service Loan Car availability for scheduled warranty service.\*\*
- Shuttle service/Courtesy van (at participating retailers)

\* May differ or not apply outside the United States, please inquire of your retailer.

\*\* Available during Basic New Vehicle Limited Warranty at participating Infiniti retailers. Subject to availability. Restrictions apply.



We recommend relying on our trained Infiniti service specialists, who refer to their detailed knowledge of your Infiniti in every service they perform. Plus, they use Genuine Infiniti Parts, designed and engineered specifically to maintain your Infiniti's original integrity. That's the distinction of your authorized Infiniti retailer.



Your Service - Your Way



## EXTENDED SERVICE PRODUCTS

Infiniti Elite Extended Protection Program\*

### Long-Term Coverage

Infiniti Elite Extended Protection Plans provide with long-term coverage to 8 years/120,000 miles. Coverage under the optional Infiniti Elite Extended Protection Plan and the Infiniti Limited Warranty begins with the delivery of the vehicle to the first retail buyer. Accordingly, your agreement may provide coverage for your vehicle for a portion of the same period as your New Vehicle Warranty. Upon expiration of the applicable Limited Warranties, the full spectrum of the Infiniti Elite Extended Protection Plan coverage is in force to the end of the time or mileage term. During the period of your Basic Warranty, the Infiniti Elite Extended Protection Plan provides you with Rental Car Coverage only.



### New Vehicle Limited Warranty

**Elite Infiniti Extended Protection Plan** (8 years/120,000 miles)

benefits include:

.....|  
**mechanical breakdown protection**

.....|  
**Roadside Assistance extended**

.....|  
**car rental coverage**

### Benefits You Can Count On

**SERVICE AT AUTHORIZED INFINITI RETAILERS/REPAIR FACILITIES.**

With the Infiniti Elite Extended Protection Plan, service is completed by Infiniti-trained technicians.

**UNLIMITED CLAIMS.**

No limit on the number of claims for covered repairs.

\* This product is not available outside the United States.

## ***EXTENDED SERVICE PRODUCTS***

### **PROVIDES FOR THE COST OF GENUINE ORIGINAL EQUIPMENT REPLACEMENT PARTS.**

Designed for use on Infiniti vehicles. No inferior substitutes.

### **EMERGENCY TOLL-FREE HELP.**

If a breakdown occurs outside your area, you are covered. Just contact the nearest Infiniti retailer, or call the special toll-free number for assistance.

### **SUBSTITUTE TRANSPORTATION.**

If a mechanical breakdown occurs and you require alternate transportation, Infiniti will reimburse you for actual expenses up to \$50 per day, to a maximum of 5 days and \$250 per service visit.



### **TRANSFERABLE TO A NEW OWNER.**

Should you sell your Infiniti before your coverage expires, you can transfer your Infiniti Elite Extended Protection Plan,\*\* thereby enhancing your vehicle's resale value.

### **CONVENIENT AND ECONOMICAL.**

Coverage that costs only pennies per day. Your Infiniti retailer will be happy to include the cost in your monthly car payment.

\*\* A nominal transfer fee may apply. For details please refer to the Infiniti Elite Extended Protection Plan Vehicle Service Contract, or contact your Infiniti retailer.



## **GENUINE INFINITI COLLISION PARTS**

If you have an accident, insist on Genuine Infiniti Collision Parts. If you want your vehicle to be restored using parts made to Infiniti's original exacting specifications – if you want it to last, help to protect your personal safety and to help hold its resale value, the solution is simple. Tell your insurance agent and your repair shop to use only Genuine Infiniti Collision Parts.

Many non-genuine parts are copies made from impressions of Infiniti parts and may not match the specifications and performance standards of Genuine Infiniti Parts. As a result, non-genuine parts may not look or fit right, and may be less safe.

The hood on your vehicle is a good example. Infiniti designed it with hood buckling creases to help prevent the hood from penetrating the interior of your vehicle in an accident. Non-genuine parts may not provide such built-in safeguards.

In some states, the law says you must be advised if non-genuine parts are used to repair your vehicle. **Why should you take a chance?**

### **Replacement Panel Limited Lifetime Corrosion Warranty\***

**See your participating Infiniti retailer for details.**

If you have your collision damage repaired using Genuine Infiniti Outer Sheet Metal Panels you don't have to worry about corrosion. That's because these panels are warranted against inside out rust-through perforation for as long as you own your Infiniti. Another reason to insist on Genuine Infiniti Collision Repair Parts.

\* This warranty does not apply to vehicles or parts, not distributed by Nissan North America and/or sold outside the United States.

## DETERMINING THE PROPER MAINTENANCE INTERVAL

As a condition of your vehicle's warranty, you are responsible for properly maintaining your vehicle. In maintaining your vehicle, you should use these guidelines to determine which maintenance schedule to use.

**Standard maintenance;** features 5,000 mile or 6 month, whichever comes first, service intervals and generally applies when you primarily operate your vehicle on the highway in temperate conditions. Premium maintenance is an Infiniti recommended optional upgrade that adds services when maintenance is performed.

**Premium Maintenance;**\* performing the Premium upgrade services may optimize the performance, durability, reliability, and resale value of your vehicle. (Premium Maintenance items are available at every 30,000 miles or 36 months interval.)

**Additional maintenance items for severe operating conditions;** should be performed on vehicles that are driven under especially demanding conditions. Additional maintenance items should be performed if you primarily operate your vehicle under the following conditions:

- Repeated short trips of less than 5 miles in normal temperatures or less than 10 miles in freezing temperatures.
- Stop-and-go traffic in hot weather or low speed driving for long distances
- Driving in dusty conditions or on rough, muddy, or salt-spread roads
- Towing a trailer, or using a camper or car-top carrier

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

\* Premium Maintenance is an Infiniti-recommended option; You need not perform such maintenance in order to maintain the warranties which come with your Infiniti. Premium Maintenance may not be available outside the United States, please inquire of your dealer.

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti dealer. See page 16 for more information on Multi-Point Inspections.

## EXPLANATION OF SCHEDULED MAINTENANCE ITEMS

The following descriptions are provided to give you a better understanding of the scheduled maintenance items that should be regularly checked or replaced. The maintenance log indicates at which mileage/time intervals each item requires service.

In addition to scheduled maintenance, your Infiniti requires that some items be checked during normal day-to-day operation. You can find these items listed under “General Maintenance” in Chapter 8 of your Owner’s manual.

Items marked with “\*” are recommended by Infiniti for reliable vehicle operation. You are not required to perform such maintenance in order to maintain the emission warranty or manufacturer recall liability. Other maintenance items and intervals are required.

When applicable, additional information can be found in the “Do-it-yourself” section in Chapter 8 of your Owner’s Manual.

**NOTE:** Nissan North America does not advocate the use of non-OEM approved aftermarket flushing systems and strongly advises against performing these services on a Infiniti product. Many of the aftermarket flushing systems use non-OEM approved chemicals or solvents, the use of which has not been validated by Nissan North America.

*For recommended fuel, lubricants, fluids, grease, and refrigerant refer to Chapter 9 in your Owner’s Manual.*

### **Emission Control System Maintenance:**

#### **Drive Belts\***

Check engine drive belts for wear, fraying or cracking and for proper tension. Replace any damaged drive belts.

#### **Engine Air Filter**

Replace at specified intervals. When driving for prolonged periods in dusty conditions, check/replace the filter more frequently.

#### **Engine Coolant\***

Replace engine coolant at the specified interval. The recommended service interval of the factory-fill coolant is 105,000 miles (168,000 km) or 7 years, whichever comes first. When adding or replacing coolant, be sure to use only Genuine Nissan Long Life Antifreeze/Coolant (Blue) or equivalent with the proper mixture. (Refer to the owner’s manual to determine the proper mixture for your area). Subse-

## **EXPLANATION OF SCHEDULED MAINTENANCE ITEMS**

quent replacement of Genuine Nissan Long Life Antifreeze/Coolant (Blue) should occur every 75,000 miles (120,000 km) or 5 years, whichever comes first. NOTE: Mixing any other type of coolant or the use of non-distilled water will reduce the recommended service interval of the coolant.

### **Hybrid Electronic Vehicle (HEV) Inverter Coolant**

Replace inverter coolant at the specified interval. The recommended service interval of the factory-fill coolant is 125,000 miles (200,000 km) or 15 years, whichever comes first. Subsequent replacement of Genuine Nissan Long Life Antifreeze/Coolant (Blue) should occur every 75,000 miles (120,000 km) or 5 years, whichever comes first. When adding or replacing coolant, be sure to use only Genuine Nissan Long Life Antifreeze/Coolant (Blue) or equivalent with the proper mixture. (Refer to

the Owner's Manual to determine the proper mixture for your area.)

NOTE: Mixing any other type of coolant or the use of non-distilled water will reduce the recommended service interval of the coolant.

### **Engine Oil and Oil Filter**

Replace engine oil and oil filter at the specified intervals. For recommended oil grade and viscosity refer to Chapter 9 in your Owner's Manual.

### **Engine Valve Clearance\***

Inspect only if valve noise increases. Adjust valve clearance if necessary.

### **Evaporative Emissions Control Vapor Lines\***

Check vapor lines and connections for leaks or looseness. Tighten connections or replace parts as necessary.

### **Fuel Filter**

Maintenance-free item (In-tank type filter).

### **Fuel Lines\***

Check the fuel hoses, piping and connections for leaks, looseness, or deterioration. Tighten connections or replace parts as necessary.

### **Spark Plugs**

Replace at specified intervals. Replacement Intervals for IPL models differ from non-IPL models. Install new plugs of the same type as originally equipped.

### **Chassis and Body Maintenance: Brake Lines and Cables**

Visually inspect for proper installation. Check for chafing, cracks, deterioration, and signs of leaking. Replace any deteriorated or damaged parts immediately.

## **EXPLANATION OF SCHEDULED MAINTENANCE ITEMS**

### **Brake Light and Cruise Control Switches**

Inspect the clearance between the brake pedal and the switches.

### **Brake Calipers, Pads, Rotors**

Check for wear, deterioration and fluid leaks. Replace any deteriorated or damaged parts immediately.

### **Exhaust System**

Visually inspect the exhaust pipes, muffler and hangers for leaks, cracks, deterioration, and damage. Tighten connections or replace parts as necessary.

### **In-Cabin Microfilter**

Replace at specified intervals. When driving for prolonged periods in dusty conditions, replace the filter more frequently.

### **Propeller Shaft(s)**

Check for damage, looseness, and grease leakage (4WD/AWD/RWD).

### **Steering Gear and Linkage, Axle and Suspension Parts, Drive Shaft Boots**

Check for damage, looseness, and leakage of oil or grease. Under severe driving conditions, inspect more frequently.

### **Tire Rotation**

Tires should be rotated every 5,000 miles according to the instructions in the Owner's Manual (except Q60 Coupe Journey model with Sport Package, Q60 Coupe Sport 6MT, Q60 Coupe Journey models with Performance Tire & Wheel Package and all Q60 convertibles). When rotating tires, check for damage and uneven wear. Replace if necessary.

### **Transmission Fluid – Automatic or Manual, Differential Oil, Transfer Case Oil**

Visually inspect for signs of leakage at specified intervals.

If towing a trailer, using a camper or car-top carrier, or driving on rough or muddy roads, replace the transmission fluid/oil at every:

- 20,000 miles or 24 months.
- 30,000 miles for QX60 Hybrid Electronic Vehicle (HEV).
- 60,000 miles for QX60 (except HEV) CVT fluid.
- 7-speed automatic transmission fluid if maintenance free.

## ***OFF-ROAD MAINTENANCE (QX80 ONLY)***

Check the following items more frequently after driving off-road through deep sand, mud or water:

- Brake pads and rotors
- Brake lines and hoses
- Differential oil, transmission fluid, and transfer case oil
- Steering linkage
- Propeller shafts and drive shafts
- Engine air filter
- In-cabin microfilter

## ***MAINTENANCE SCHEDULES***



The following Maintenance Schedule has been compiled by Infiniti to assist you in performing the recommended maintenance services and keeping appropriate records of services performed. Along with the related repair invoices, receipts, and other such records, a properly documented maintenance history could enhance the value of your vehicle should you ever wish to sell it. The services listed represent the minimal factory recommended requirements for each time/mileage interval, up to 120,000 miles / 144 months.

Beginning on page 43 you will find a maintenance log that should be used to track when and where services were performed. Ask your Service Consultant to stamp and update your log each time your vehicle is serviced.

# COMPLIMENTARY MULTI-POINT INSPECTION\*

For the ultimate in preventative maintenance, ask your Service Consultant for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer.

MPI's are performed by Infiniti factory trained Technicians who will provide you with a detailed report of your vehicles condition.

Driving your Infiniti should be as worry-free an experience as possible. Trust your Infiniti retailer to inspect and maintain your vehicle so you can take pride in knowing your vehicle is ready for the road ahead.

\*Available at participating retailers

NOTE: Form shown is an example. Actual form may vary.



## Complimentary Multi-Point Inspection

Client: \_\_\_\_\_ Year/Model: \_\_\_\_\_ Date: \_\_\_\_\_  
 Mileage: \_\_\_\_\_ VIN: \_\_\_\_\_  
 Service Consultant: \_\_\_\_\_ Technician: \_\_\_\_\_ Work Order #: \_\_\_\_\_

CHECKED AND OK AT THIS TIME   
  MAY NEED FUTURE ATTENTION   
  REQUIRES IMMEDIATE ATTENTION   
  NOT INSPECTED AT THIS TIME

ENGINE / FLUIDS	BATTERY / ELECTRICAL
<input type="checkbox"/> HOSE OPERATION	<input type="checkbox"/> BATTERY TERMINALS / CABLES / MOUNTINGS
<input type="checkbox"/> HEADLIGHTS / TURN SIGNALS / HIGH BEAMS / FOG LIGHTS	<input type="checkbox"/> BATTERY CAPACITY TEST (TEST RESULTS ATTACHED)
<input type="checkbox"/> LEFT WIPER BLADE	<input type="checkbox"/> PASS <input type="checkbox"/> RECHARGE <input type="checkbox"/> FAIL <input type="checkbox"/> NOT INSPECTED
<input type="checkbox"/> RIGHT WIPER BLADE	<input type="checkbox"/> COMMENTS:
<input type="checkbox"/> TAIL LIGHTS / BRAKE LIGHTS / TURN SIGNALS / REVERSE LIGHTS / EXTERIOR LAMPS / REAR WIPER	
<input type="checkbox"/> IN-CABIN MICROPHONE	
<b>COMMENTS:</b>	
<b>UNDER HOOD</b>	
<input type="checkbox"/> ENGINE OIL	
<input type="checkbox"/> COOLANT	
<input type="checkbox"/> POWER STEERING FLUID	
<input type="checkbox"/> BRAKE FLUID	
<input type="checkbox"/> WINDSHIELD WASHER FLUID	
<input type="checkbox"/> AUTOMATIC TRANSMISSION FLUID	
<input type="checkbox"/> COOLING SYSTEM HOSES	
<input type="checkbox"/> HEATER / AC HOSES AND CONNECTIONS	
<input type="checkbox"/> RADIATOR CORE AND CAP	
<input type="checkbox"/> ENGINE AIR FILTER	
<input type="checkbox"/> DRIVE BELTS	
<b>COMMENTS:</b>	
<b>UNDER VEHICLE</b>	
<input type="checkbox"/> REAR SHOCKS / SUSPENSION	
<input type="checkbox"/> REAR SUBFRAME	
<input type="checkbox"/> DIFFERENTIAL LEAKS (CONDITION & LEAKS)	
<input type="checkbox"/> DRIVE SHAFT	
<input type="checkbox"/> MUFFLER / EXHAUST / MOUNTINGS	
<input type="checkbox"/> FRONT SHOCKS / SUSPENSION (EV BOOTS / TO ROGS / BUSHINGS)	
<input type="checkbox"/> AXLES - VISUAL INSPECTION FOR LEAKS	
<input type="checkbox"/> FLUID LEAKS (OIL / TRANSMISSION / COOLANT)	
<b>COMMENTS:</b>	

  

TIRE DEPTH	TIRE ROTATION	PRESSURE
<b>LEFT FRONT</b> <input type="checkbox"/> 7/32 OR GREATER <input type="checkbox"/> 4/32 TO 6/32 <input type="checkbox"/> 3/32 OR LESS <input type="checkbox"/> NOT INSPECTED PRESSURE <input type="checkbox"/> INCOMING <input type="checkbox"/> OUTGOING <b>COMMENTS:</b>	<b>BREAD DEPTH</b>  <input type="checkbox"/> 7/32 OR GREATER <input type="checkbox"/> 4/32 TO 6/32 <input type="checkbox"/> 3/32 OR LESS <input type="checkbox"/> NOT INSPECTED PRESSURE <input type="checkbox"/> INCOMING <input type="checkbox"/> OUTGOING <b>COMMENTS:</b>	<b>RIGHT FRONT</b> <input type="checkbox"/> 7/32 OR GREATER <input type="checkbox"/> 4/32 TO 6/32 <input type="checkbox"/> 3/32 OR LESS <input type="checkbox"/> NOT INSPECTED PRESSURE <input type="checkbox"/> INCOMING <input type="checkbox"/> OUTGOING <b>COMMENTS:</b>
<b>LEFT REAR</b> <input type="checkbox"/> 7/32 OR GREATER <input type="checkbox"/> 4/32 TO 6/32 <input type="checkbox"/> 3/32 OR LESS <input type="checkbox"/> NOT INSPECTED PRESSURE <input type="checkbox"/> INCOMING <input type="checkbox"/> OUTGOING <b>COMMENTS:</b>	<b>RIGHT REAR</b> <input type="checkbox"/> 7/32 OR GREATER <input type="checkbox"/> 4/32 TO 6/32 <input type="checkbox"/> 3/32 OR LESS <input type="checkbox"/> NOT INSPECTED PRESSURE <input type="checkbox"/> INCOMING <input type="checkbox"/> OUTGOING <b>COMMENTS:</b>	

  

BRAKE CONDITION
<input type="checkbox"/> LEFT FRONT BRAKE PADS <span style="float: right;">mm</span> <input type="checkbox"/> LEFT REAR BRAKE PADS <span style="float: right;">mm</span> <input type="checkbox"/> RIGHT FRONT BRAKE PADS <span style="float: right;">mm</span> <input type="checkbox"/> RIGHT REAR BRAKE PADS <span style="float: right;">mm</span>
<b>COMMENTS &amp; RECOMMENDATIONS:</b>

GENUINE INFINITI PARTS AND SERVICE

WIRE COPY - (L)EAST   
 YELLOW COPY - SERVICE ASSISTANT (S)ALE   
 PINK COPY - (R)IGHT (R)IP



## 5,000 MILES OR 6 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

## 10,000 MILES OR 12 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating Conditions

- Replace brake fluid
- Inspect the following:
  - Axle & suspension parts
  - Exhaust system
  - Front suspension ball joints
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

<sup>3</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 15,000 MILES OR 18 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

## 20,000 MILES OR 24 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2,3</sup>
  - Axle & suspension parts
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>4</sup>
  - CVT fluid
  - Differential oil<sup>2</sup>
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Fuel lines/connections
  - Fuel tank vapor vent system hoses
  - Manual transmission oil<sup>2</sup>
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints
  - Transfer case oil (4WD/AWD)<sup>2</sup>

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

<sup>3</sup> Except models with 7-speed automatic transmission.

<sup>4</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible). Equipment varies by model. Perform only those operations that apply to your vehicle.

## 25,000 MILES OR 30 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

## 30,000 MILES OR 36 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace engine air filter
- Replace in-cabin microfilter
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>4</sup>)
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating Conditions

- Replace brake fluid
- Inspect the following:
  - Axle & suspension parts
  - Exhaust system
  - Front suspension ball joints
  - Steering gear and linkage
  - Steering linkage ball joints

For Optional Premium Maintenance Upgrade information please see page 39.

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

<sup>3</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

<sup>4</sup> Mileage Only

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 35,000 MILES OR 42 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

## 40,000 MILES OR 48 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2,3</sup>
  - Axle & suspension parts
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>4</sup>
  - CVT fluid
  - Differential oil<sup>2</sup>
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Exhaust system
  - Front suspension ball joints
  - Fuel lines/connections
  - Fuel tank vapor vent system hoses
  - Manual transmission oil<sup>2</sup>
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints
  - Transfer case oil (4WD/AWD)<sup>2</sup>

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

<sup>3</sup> Except models with 7-speed automatic transmission.

<sup>4</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.



## 45,000 MILES OR 54 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

## 50,000 MILES OR 60 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating Conditions

- Replace brake fluid
- Inspect the following:
  - Axle & suspension parts
  - Exhaust system
  - Front suspension ball joints
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

<sup>3</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 55,000 MILES OR 66 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

# 60,000 MILES OR 72 MONTHS

## STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace engine air filter
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>5</sup>)
- Replace brake fluid
- Replace in-cabin microfilter
- Replace spark plugs (only Q60 IPL)
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2,3</sup>
  - Axle & suspension parts
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>4</sup>
  - CVT fluid<sup>2</sup>
  - Differential oil<sup>2</sup>
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Exhaust system
  - Front suspension ball joints
  - Fuel lines/connections
  - Fuel tank vapor vent system hoses
  - Manual transmission oil<sup>2</sup>
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints
  - Transfer case oil (4WD/AWD)<sup>2</sup>

For Optional Premium Maintenance Upgrade information please see page 39.

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water.

2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

3 Except models with 7-speed automatic transmission.

4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

5 Mileage Only

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 65,000 MILES OR 78 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

## 70,000 MILES OR 84 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid <sup>2</sup>
  - Axle & suspension parts
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

### Additional Maintenance Items for Severe Operating Conditions

- Replace brake fluid
- Inspect the following:
  - Axle & suspension parts
  - Exhaust system
  - Front suspension ball joints
  - Steering gear and linkage
  - Steering linkage ball joints

**NOTE:** Refer to Page 9 for Engine Coolant maintenance information.

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

<sup>3</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 75,000 MILES OR 90 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

# 80,000 MILES OR 96 MONTHS

## STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2,3</sup>
  - Axle & suspension parts
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>4</sup>
  - CVT fluid
  - Differential oil<sup>2</sup>
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Exhaust system
  - Front suspension ball joints
  - Fuel lines/connections
  - Fuel tank vapor vent system hoses
  - Manual transmission oil<sup>2</sup>
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints
  - Transfer case oil (4WD/AWD)<sup>2</sup>

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

<sup>3</sup> Except models with 7-speed automatic transmission.

<sup>4</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.



## 85,000 MILES OR 102 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

# 90,000 MILES OR 108 MONTHS

## STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace engine air filter
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>4</sup>)
- Replace in-cabin microfilter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2</sup>
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

## Additional Maintenance Items for Severe Operating Conditions

- Replace brake fluid
- Inspect the following:
  - Axle & suspension parts
  - Exhaust system
  - Front suspension ball joints
  - Steering gear and linkage
  - Steering linkage ball joints

**NOTE:** Refer to Page 9 for Engine Coolant maintenance information.

- For Optional Premium Maintenance Upgrade information please see page 39.
- For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

<sup>3</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

<sup>4</sup> Mileage Only

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 95,000 MILES OR 114 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

# 100,000 MILES OR 120 MONTHS

## STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace brake fluid
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2,3</sup>
  - Axle & suspension parts
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>4</sup>
  - CVT fluid
  - Differential oil<sup>2</sup>
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Exhaust system
  - Front suspension ball joints
  - Fuel lines/connections
  - Fuel tank vapor vent system hoses
  - Manual transmission oil<sup>2</sup>
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints
  - Transfer case oil (4WD/AWD)<sup>2</sup>

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

<sup>3</sup> Except models with 7-speed automatic transmission.

<sup>4</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 105,000 MILES OR 126 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace in-cabin microfilter
- Replace spark plugs (except Q60 IPL)
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

**NOTE:** Refer to Page 9 for Engine Coolant maintenance information.

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

# 110,000 MILES OR 132 MONTHS

## STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid <sup>2</sup>
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>3</sup>
  - CVT fluid
  - Differential oil
  - Drive shaft boots (4WD/AWD)
  - Engine drive belts
  - Manual transmission oil
  - Propeller shaft (4WD/AWD/RWD)
  - Transfer case oil (4WD/AWD)

## Additional Maintenance Items for Severe Operating Conditions

- Replace brake fluid
- Inspect the following:
  - Axle & suspension parts
  - Exhaust system
  - Front suspension ball joints
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.

<sup>3</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.

## 115,000 MILES OR 138 MONTHS

### STANDARD MAINTENANCE

- Replace engine oil and filter
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)

### Additional Maintenance Items for Severe Operating Conditions

- Inspect the following:
  - Axle & suspension parts
  - Brake calipers, pads, rotors
  - Drive shaft boots (4WD/AWD)
  - Exhaust system
  - Front suspension ball joints
  - Propeller shaft (4WD/AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

# 120,000 MILES OR 144 MONTHS

## STANDARD MAINTENANCE

- Replace engine oil and filter
- Replace engine air filter
- Replace brake fluid
- Replace CVT Fluid (QX60 Hybrid Electronic Vehicle (HEV)<sup>5</sup>)
- Replace in-cabin microfilter
- Replace spark plugs (only Q60 IPL)
- Lubricate Propeller shaft grease (for QX80 4WD)<sup>1</sup>
- Rotate tires (refer to page 11 for exceptions)
- Inspect the following:
  - Automatic transmission fluid<sup>2,3</sup>
  - Axle & suspension parts
  - Brake lines & cables
  - Brake calipers, pads, rotors
  - Brake light & cruise control switches<sup>4</sup>
  - CVT fluid<sup>2</sup>
  - Differential oil<sup>2</sup>
  - Drive shaft boots (4WD/ AWD)
  - Engine drive belts
  - Exhaust system
  - Front suspension ball joints
  - Fuel lines/connections
  - Fuel tank vapor vent system hoses
  - Manual transmission oil<sup>2</sup>
  - Propeller shaft (4WD/ AWD/RWD)
  - Steering gear and linkage
  - Steering linkage ball joints
  - Transfer case oil (4WD/AWD)<sup>2</sup>

**NOTE:** Refer to Page 10 for Hybrid Electronic Vehicle (HEV) Inverter Coolant maintenance information.

- For Optional Premium Maintenance Upgrade information please see page 39.
- For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> The propeller shaft should be re-greased after being immersed in water.

<sup>2</sup> Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.

<sup>3</sup> Except models with 7-speed automatic transmission.

<sup>4</sup> Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

<sup>5</sup> Mileage Only

Equipment varies by model. Perform only those operations that apply to your vehicle.



## Optional Premium Maintenance Upgrade

### 30,000 MILES OR 36 MONTHS

Premium Upgrade adds the following services to Standard Maintenance:

- Lubricate all locks/hinges
- Replace automatic transmission fluid<sup>1</sup>
- Replace differential oil
- Replace engine drive belts
- Replace manual transmission oil
- Replace radiator cap
- Replace transfer case oil (4WD/AWD)
- Replace wiper blades
- Inspect the following:
  - All lights
  - Headlights/adjust if necessary

### 60,000 MILES OR 72 MONTHS

Premium Upgrade adds the following services to Standard Maintenance:

- Lubricate all locks/hinges
- Replace automatic transmission fluid<sup>1</sup>
- Replace differential oil
- Replace engine drive belts
- Replace manual transmission oil
- Replace radiator cap
- Replace transfer case oil (4WD/AWD)
- Replace wiper blades
- Inspect the following:
  - All lights
  - Headlights/adjust if necessary

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> Except models with 7-speed automatic transmission.

Equipment varies by model. Perform only those operations that apply to your vehicle.

## Optional Premium Maintenance Upgrade

### 90,000 MILES OR 108 MONTHS

Premium Upgrade adds the following services to Standard Maintenance:

- Lubricate all locks/hinges
- Replace automatic transmission fluid<sup>1</sup>
- Replace differential oil
- Replace engine drive belts
- Replace manual transmission oil
- Replace radiator cap
- Replace transfer case oil (4WD/AWD)
- Replace wiper blades
- Inspect the following:
  - All lights
  - Headlights/adjust if necessary

### 120,000 MILES OR 144 MONTHS

Premium Upgrade adds the following services to Standard Maintenance:

- Lubricate all locks/hinges
- Replace automatic transmission fluid<sup>1</sup>
- Replace differential oil
- Replace engine drive belts
- Replace manual transmission oil
- Replace radiator cap
- Replace transfer case oil (4WD/AWD)
- Replace wiper blades
- Inspect the following:
  - All lights
  - Headlights/adjust if necessary

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

<sup>1</sup> Except models with 7-speed automatic transmission.

Equipment varies by model. Perform only those operations that apply to your vehicle.

# HEV Li-ion BATTERY REPLACEMENT RECORD

When replacing the Li-ion battery pack or module, be sure to record the ID in the space provided. In addition, when replacing 12 modules, record the oldest module ID.

When replacing the module of new car

New module ID	<input type="text"/>	<input type="text"/>
Module production date	<input type="text"/>	
Location at replacement module	No. <input type="text"/>	

Date:   
Mileage at replacement  Miles  
Dealer name or signature

Operation	<input type="checkbox"/> Replace the Li-ion battery pack
	Li-ion battery pack ID <input type="text"/> Plant/Line <input type="text"/> Ser No. <input type="text"/>
	<input type="checkbox"/> Replace 12 modules
	New module ID <input type="text"/> <input type="text"/> Module production date <input type="text"/>

Date:   
Mileage at replacement  Miles  
Dealer name or signature

When replacing 1 module

New module ID	<input type="text"/>	<input type="text"/>
Module production date	<input type="text"/>	
Location at replacement module	No. <input type="text"/>	

Date:   
Mileage at replacement  Miles  
Dealer name or signature

Equipment varies by model. Perform only those operations that apply to your vehicle.

# HEV Li-ion BATTERY REPLACEMENT RECORD

Operation	<input type="checkbox"/> Replace the Li-ion battery pack	Li-ion battery pack ID	Plant/Line	Ser No.
		<input type="text"/>	<input type="text"/>	<input type="text"/>
	<input type="checkbox"/> Replace 12 modules	New module ID		
		<input type="text"/>	<input type="text"/>	
	Module production date	<input type="text"/>		

Date: \_\_\_\_\_  
 Mileage at replacement: \_\_\_\_\_ Miles  
 Dealer name or signature: \_\_\_\_\_

When replacing 1 module

New module ID	<input type="text"/>	<input type="text"/>
Module production date	<input type="text"/>	
Location at replacement module	No. <input type="text"/>	

Date: \_\_\_\_\_  
 Mileage at replacement: \_\_\_\_\_ Miles  
 Dealer name or signature: \_\_\_\_\_

Operation	<input type="checkbox"/> Replace the Li-ion battery pack	Li-ion battery pack ID	Plant/Line	Ser No.
		<input type="text"/>	<input type="text"/>	<input type="text"/>
	<input type="checkbox"/> Replace 12 modules	New module ID		
		<input type="text"/>	<input type="text"/>	
	Module production date	<input type="text"/>		

Date: \_\_\_\_\_  
 Mileage at replacement: \_\_\_\_\_ Miles  
 Dealer name or signature: \_\_\_\_\_

When replacing 1 module

New module ID	<input type="text"/>	<input type="text"/>
Module production date	<input type="text"/>	
Location at replacement module	No. <input type="text"/>	

Date: \_\_\_\_\_  
 Mileage at replacement: \_\_\_\_\_ Miles  
 Dealer name or signature: \_\_\_\_\_

# MAINTENANCE LOG

<b>5,000 Miles or 6 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>10,000 Miles or 12 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>15,000 Miles or 18 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:
<b>20,000 Miles or 24 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>25,000 Miles or 30 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>30,000 Miles or 36 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:
<b>35,000 Miles or 42 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>40,000 Miles or 48 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>45,000 Miles or 54 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:

# MAINTENANCE LOG

<b>50,000 Miles or 60 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>55,000 Miles or 66 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>60,000 Miles or 72 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:
<b>65,000 Miles or 78 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>70,000 Miles or 84 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>75,000 Miles or 90 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:
<b>80,000 Miles or 96 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>85,000 Miles or 102 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>90,000 Miles or 108 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:

# MAINTENANCE LOG

<b>95,000 Miles or 114 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>100,000 Miles or 120 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>105,000 Miles or 126 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:
<b>110,000 Miles or 132 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>115,000 Miles or 138 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:	<b>120,000 Miles or 144 Months</b> Dealer Name: _____ Date: _____ Mileage: _____ Dealer Stamp:

