

2012 Infiniti G Coupe/Convertible

Quick Reference Guide



INFINITI.



Behind steering wheel

Behind steering wheel

Behind steering wheel

Behind steering wheel

Behind steering wheel

Behind steering wheel

Behind steering wheel

Behind steering wheel

Control panel display

Behind steering wheel

Audio system

Automatic climate controls

Front passenger air bag status light

Climate controlled seat switches

Hard top open / close switch

Hard top open / close switch

- 01** INSTRUMENT BRIGHTNESS CONTROL*
- 02** TRIP COMPUTER SWITCHES
- 03** HEADLIGHT AND TURN SIGNAL CONTROL
- 04** LOW TIRE PRESSURE WARNING LIGHT
- 05** DOT MATRIX LIQUID CRYSTAL DISPLAY
- 06** WINDSHIELD WIPER / WASHER SWITCH
- 07** TRIP A/B RESET BUTTON*
- 08** STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH®
- 09** CRUISE CONTROL
- 10** PUSH BUTTON IGNITION SWITCH
- 11** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 12** TRUNK RELEASE SWITCH
- 13** REAR SONAR SYSTEM SWITCH*
- 14** TILT AND TELESCOPIC STEERING COLUMN*
- 15** INTELLIGENT KEY PORT
- 16** HOOD RELEASE*
- 17** CONTROL PANEL DISPLAY
- 18** AUDIO SYSTEM
- 19** AUTOMATIC CLIMATE CONTROLS
- 20** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 21** CLIMATE CONTROLLED SEAT SWITCHES*
- 22** HARD TOP OPEN / CLOSE SWITCH

*See your Owner's Manual for information.

essential information

Loose Fuel Cap	2
Tire Pressure Monitoring System (TPMS)	2
Opening/Closing the Hard Top (Convertible models)	3
Automatic Power Windows	3
Accessing the Front Cup Holders (if so equipped)	3

first drive features

INFINITI Intelligent Key™ System	4
Trunk Lid Release	5
Power Seat Adjustments	5
Passenger Rear Seat Entry/Exit	6
Automatic Drive Positioner (if so equipped)	6
Outside Mirror Control Switch	6
Starting/Stopping the Engine	7
Headlight Control Switch	8
Windshield Wiper/Washer Switch	8
Climate Controls (if so equipped)	9
FM/AM/XM® Satellite Radio With CD/DVD Player (with Navigation System — if so equipped)	10
Cruise Control	11
Parking Brake	11
Opening/Closing the Hard Top (Convertible models)	12
Fuel-Filler Door	12

system guide

Trip Computer	13
Bluetooth® Hands-free Phone System (with Navigation System — if so equipped)	14
Navigation System (if so equipped)	14
DVD Player (if so equipped)	15
HomeLink® Universal Transceiver (if so equipped)	15



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and “**Starting and driving (section 5)**” of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at www.InfinityUSA.com.

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. INFINITI reserves the right to change specifications or design without notice and without obligation.

Loose Fuel Cap

- A LOOSE FUEL CAP warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Tire Pressure Monitoring System (TPMS)

- A CHECK TIRE PRESSURE warning message will appear in the dot matrix liquid crystal display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

Opening/Closing the Hard Top (Convertible models)

- The hard top can ONLY be operated when the trunk area is **EMPTY** and the separator partition **01** is in the upright position and secured in its holders.
- AVOID stopping the retractable hard top OPEN/CLOSE operation mid-way through the process. If left in the mid-position, the hard top may creep to its fully retracted position potentially causing roof damage.


For more information, refer to the “**Pre-driving checks and adjustment (section 3)**” of your Owner’s Manual.



Automatic Power Windows

- Your power windows have an automatic adjusting function to ensure windows close completely to help seal against wind noise and weather leaks.
- When the front doors are being opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.
- If your vehicle’s battery is discharged or disconnected, your power window automatic function will not operate.
- Refer to your Owner’s Manual for information to initialize your power window system.
- If the power window functions do not operate properly after initializing the system, have your vehicle checked by an INFINITI retailer.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

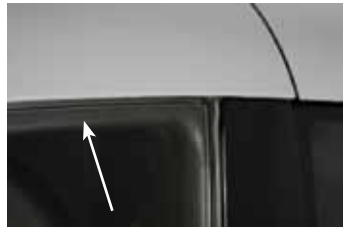

Accessing the Front Cup Holders (if so equipped)

- To open the cup holders, push the lid down and release.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.








first drive features

INFINITI Intelligent Key™ System

The INFINITI Intelligent Key™ system allows you to lock or unlock the vehicle, open the trunk and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To release the trunk lid, press the  button **04** for more than 1 second. Lift the trunk lid to access the trunk.
- To retract your hard top (Convertible models), push and hold the door handle request switch **01** until the hard top is fully open.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.



INFINITI INTELLIGENT KEY™ BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **06** of the Intelligent Key port blinks and the Intelligent Key battery discharge indicator **07** is displayed in the dot matrix liquid crystal display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the buttons facing upward and the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the low battery indicator **07**, replace the battery in the Intelligent Key.




For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.

Trunk Lid Release

Use one of the following methods to open the trunk:

- Push the trunk open request switch **01** for more than one second while carrying the INFINITI Intelligent Key™ with you.



- Press the trunk button  **HOLD** on the Intelligent Key for more than one second.



- Push down on the trunk lid release switch **02** located on the instrument panel to the left of the steering wheel.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Power Seat Adjustments

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.

SEAT LIFTER

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.



LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar area, push the front or rear end of the switch **03** .

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

first drive features

Passenger Rear Seat Entry/Exit

- To fold the front seatback down, pull the seatback lever **01** up. Make sure that the front seatback is completely folded down.
- To slide the front seat forward, firmly push the seatback switch **02**. The front seat will move forward.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



Automatic Drive Positioner (if so equipped)

- Two positions for the driver’s seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position (automatic transmissions) or the parking brake is applied (manual transmissions).
 - Push the ignition switch to the **ON** position.
 - Adjust the driver’s seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver’s seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key™.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Outside Mirror Control Switch

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle “neutral” position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Starting/Stopping the Engine

AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the INFINITI Intelligent Key™ is with you (that is, in your pocket or purse).

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **N (NEUTRAL)**.
- Depress the clutch pedal to the floor.
- Push the ignition switch **START/STOP** button.

TURNING THE ENGINE OFF

- For an automatic transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.
- For a manual transmission, apply the foot brake, place the vehicle in 1st gear, apply the parking brake and push the ignition switch.

EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

- Rapidly push the push-button ignition switch 3 consecutive times, or
- Push and hold the push-button ignition switch for more than 2 seconds.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.



first drive features

Headlight Control Switch

- Turn the headlight control switch **01** to the OFF position to turn on the front parking, side marker, tail, license plate and instrument panel lights.
- Turn the switch **01** to the AUTO position to turn on the headlights.



AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light.
- The autolight system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch **01** to the **AUTO** position then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch **01** to the **OFF**, OFF or OFF position.

FOG LIGHT SWITCH

NOTE: The headlights must be on and the low beams OFF selected for the fog lights to operate.

- Turn the switch (inside collar) **02** to the ON position to turn the fog lights on.
- Turn the switch (inside collar) **02** to the **OFF** position to turn the fog lights off.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Windshield Wiper/Washer Switch

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wipers.
- 02A** Intermittent (**INT**) - Wipers operate intermittently and vary in accordance with vehicle speed. The intermittent operation speed can be further adjusted by twisting the time control ring **02B**.
- 03** Low (**LO**) - Wipers operate at a continuous low-speed.
- 04** High (**HI**) - Wipers operate at a continuous high-speed.



- Pull the lever toward you to activate the washer. The wipers will operate several times.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



Climate Controls (if so equipped)



01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL KNOB

- Press the **AUTO** button to turn the system on and the fan speed, air flow distribution and temperature will be automatically maintained. Turn the driver's side temperature control knob left for cooler air or right for warmer air.

 
02 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually adjust the fan speed up  or down .

03 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on or off.

04 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window and outside mirror defroster switch  to turn the system on or off.

05 MODE BUTTON

- Manually select the air flow outlets by pressing the **MODE** button. Air flows from center vents, side vents, foot outlets, and defroster outlets as indicated by the icons displayed on the control panel.

06 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL KNOB

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side control by turning the passenger's side temperature control knob. Turn the passenger's side temperature control knob left for cooler air or right for warmer air.

For more information, refer to the "Instrument and controls (section 2)" or the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

first drive features

FM/AM/XM[®]* Satellite Radio With CD/DVD Player (with Navigation System — if so equipped)



01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 SEEK•CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK•CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For XM[®] satellite radio, press the **SEEK•CAT** button or the **TRACK** button to switch to the first channel of the previous or next category.
- Press the **SEEK•CAT** button or the **TRACK** button to change tracks on a CD.
- Press and hold the **SEEK•CAT** button or the **TRACK** button to fast forward or rewind a track on a CD.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for XM satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM•FM/SAT** button **05**, then tune to the desired AM, FM or XM satellite station.
- Then press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then press the corresponding station select button (1-6).

*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Cruise Control

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release. The **CRUISE SET** indicator light in the instrument panel will illuminate.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To turn off cruise control, push the **ON/OFF** switch. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will turn off.




For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Parking Brake

WITH FOOT PEDAL

- To apply, firmly depress the parking brake pedal **01**.
- To release, firmly press the foot brake **02**, then press the parking brake pedal **01** and the parking brake will release.

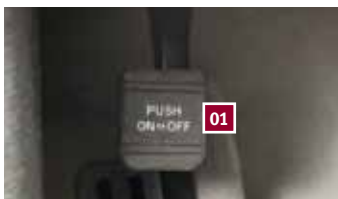

WITH LEVER

- To apply, pull the parking brake lever **03** up.
- To release, firmly press the foot brake while slightly pulling up on the parking brake lever. Push the button **04** and lower the lever completely.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

Opening/Closing the Hard Top (Convertible models)

Before opening or closing the retractable hard top, refer to your Owner's Manual for detailed warnings and cautions regarding hard top operation.

Preparing to Lower the Hard Top

1. The vehicle must be on a level surface when operating the hard top.
2. Make sure that no cargo is placed in the trunk area.
3. Pull up on the strap to open the trunk room partition.
4. Secure the partition hooks into holders until they latch. If the trunk room partition hooks are not latched in the holders, the hard top cannot be operated and the **CHECK SEPARATOR** indicator will illuminate on the dot matrix liquid crystal display located between the tachometer and speedometer.
5. Securely close the trunk before operating the hard top.



Hard Top Operation

1. Move the shift lever to the **P (PARK)** position (automatic transmission) or move the shift lever to the **N (NEUTRAL)** position (manual transmission) and apply the parking brake.
2. Start the engine.
3. Press the hard top operating switch, located on the center console, to **OPEN** or **CLOSE** and hold until the top is fully positioned.
4. The **ROOF OPEN** or **ROOF CLOSED** indicator will display when the hard top is fully positioned.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

Fuel-Filler Door




The fuel-filler door is located on the right, rear side of the vehicle.

- Unlock the fuel-filler door using one of the following operations, then push and release the left side of the door to open.
 - Push the door handle request switch while carrying the INFINITI Intelligent Key™ with you.
 - Press the UNLOCK button on the Intelligent Key.
 - Push the power door lock switch to the UNLOCK position.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

Trip Computer

- When the  button **01** is pressed, the following modes will appear on the dot matrix liquid crystal display **02** :
 - **MPG** – Displays the current fuel consumption since the last reset.
 - **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - **TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected mode.
 - **WARNING** – If there are any.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

system guide


Bluetooth® Hands-free Phone System (with Navigation System - if so equipped)


- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*



CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button, and select the "Connect Phone" key.
2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
3. When the connecting is complete, the screen will return to the Phone menu display.

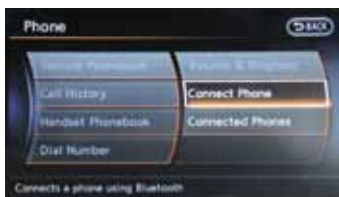

*Some jurisdictions prohibit the use of cellular telephones while driving.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.InfinitiUSA.com/bluetooth.

Navigation System (if so equipped)



- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- The Navigation System can also provide you with important data, such as distance to empty, your tire rotation schedule and other maintenance interval reminders.

For more information, please refer to your Navigation System Owner's Manual.

DVD Player (if so equipped)

- With this DVD Player, you can play video files via a DVD or CD from the control panel.
- To view movies on the control panel, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



HomeLink® Universal Transceiver (if so equipped)



- The HomeLink® system can learn and consolidate the functions of up to three different handheld transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.



INFINITI.

All illustrations, photographs and specifications in this guide are based on the latest product information; some vehicle parts cannot be shown in certain photographs. Some vehicles are shown with optional equipment. See actual vehicles for complete accuracy. Infiniti Division of Nissan North America, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications and models, and to discontinue models or equipment. Availability and delivery time for particular models and equipment combinations may vary. For information on availability, additional options or accessories, contact your Infiniti retailer. All specifications, options and accessories shown in this guide apply to the 49 continental states. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. INFINITI, the Infiniti logo and INFINITI model names are Nissan trademarks.